



C162 Skycatcher Standardization Manual v4.0

**Rainier Flight Service
Air Agency Certificate No. 1B8S346L**

1. CHECKLIST POLICY	4
2. BRIEFINGS.....	5
3. NORMAL PROCEDURES	7
3.1 BEFORE START	7
3.2 ENGINE START	9
3.3 AFTER START	11
3.4 BEFORE TAKEOFF	12
3.5 ENGINE RUNUP	14
3.6 TAKEOFF.....	16
3.7 CLIMB	16
3.8 CRUISE	17
3.9 DESCENT	18
3.10LANDING.....	19
3.11AFTER LANDING	20
3.12PARKING / SECURING	21
4. VFR FLIGHT MANEUVERS	22
4.1 MANEUVER: Airport Traffic Pattern	23
4.2 MANEUVER: Normal/Crosswind Takeoff and Climb	26
4.3 MANEUVER: Normal/Crosswind Approach and Landing	28
4.4 MANEUVER: Soft-Field Takeoff and Climb.....	30
4.5 MANEUVER: Soft-Field Approach and Landing.....	32
4.6 MANEUVER: Short-Field Takeoff and Climb.....	34
4.7 MANEUVER: Short-Field Approach and Landing.....	36
4.8 MANEUVER: 180° Power-Off Accuracy Approach and Landing	38
4.9 MANEUVER: Forward Slip to a Landing.....	40
4.10MANEUVER: Go-Around/Rejected Landing	41
4.11MANEUVER: Maneuvering In Slow Flight	43
4.12MANEUVER: Power-Off Stalls – Full or Imminent.....	45
4.13MANEUVER: Power-On Stalls - Full or Imminent.....	47
4.14MANEUVER: Crossed-Control Stalls – Full/Imminent (CFI Applicants Only)	49
4.15MANEUVER: Elevator Trim Stalls – Imminent (CFI Applicants Only)	51
4.16MANEUVER: Secondary Stalls – Imminent (CFI Applicants Only).....	53
4.17MANEUVER: Accelerated Stalls – Imminent.....	55
4.18MANEUVER: Steep Turns	57
4.19MANEUVER: Steep Spirals	59
4.20MANEUVER: Chandelles	61
4.21MANEUVER: Lazy Eights	63
4.22MANEUVER: Rectangular Course	65
4.23MANEUVER: S-Turns Across a Road	67

4.24	MANEUVER: Turns-Around-a-Point	69
4.25	MANEUVER: Eights on Pylons	71
4.26	MANEUVER: Pilotage and Dead Reckoning	73
4.27	MANEUVER: Radio Navigation and Radar Services.....	73
4.28	MANEUVER: Diversion	74
4.29	MANEUVER: Lost Procedure	74
5.	ABNORMAL / EMERGENCY PROCEDURES	75
5.1	Emergency Approach and Landing	76
5.2	EMERGENCY PROCEDURE: Engine Failure - During Takeoff Roll	77
5.3	EMERGENCY PROCEDURE: Engine Failure - Immediately After Takeoff	77
5.4	EMERGENCY PROCEDURE: Engine Failure – In Flight	78
5.5	EMERGENCY PROCEDURE: Emergency Landing Without Engine Power	79
5.6	EMERGENCY PROCEDURE: Precautionary Landing with Engine Power.....	80
5.7	EMERGENCY PROCEDURE: Ditching	81
5.8	EMERGENCY PROCEDURE: Engine Fire – During Start on Ground.....	82
5.9	EMERGENCY PROCEDURE: Engine Fire – In Flight.....	83
5.10	EMERGENCY PROCEDURE: Electrical OR Cabin Fire - In Flight.....	84
5.11	EMERGENCY PROCEDURE: Wing Fire.....	85
5.12	EMERGENCY PROCEDURE: Inadvertent Icing Encounter During Flight	86
5.13	EMERGENCY PROCEDURE: Landing with a Flat Main Tire.....	87
5.14	EMERGENCY PROCEDURE: Landing with a Flat Nose Tire	87
5.15	EMERGENCY PROCEDURE: Over Voltage.....	88
5.16	EMERGENCY PROCEDURE: Low Voltage	89
5.17	EMERGENCY PROCEDURE: ADC & ADAHRS Failure	90
5.18	EMERGENCY PROCEDURE: Electric Trim Failure	91
5.19	EMERGENCY PROCEDURE: Emergency Descent	92
5.20	EMERGENCY PROCEDURE: Spin Recovery	93
5.21	ABNORMAL PROCEDURE: Low Oil Pressure	94
5.22	ABNORMAL PROCEDURE: High Oil Temperature	94
5.23	ABNORMAL PROCEDURE: Engine Roughness.....	95
5.24	EMERGENCY PROCEDURE: Door Open in Flight	95
5.25	ABNORMAL PROCEDURE: Loss of Communications	96
5.26	Emergency Equipment and Survival Gear	96
6	GLOSSARY OF ABBREVIATIONS AND TERMS.....	97

1. CHECKLIST POLICY

A vital part in the development of a professional pilot is training in checklist usage and discipline. Pilot deviation from standard operating procedures is the number one crew cause of hull loss accidents. Many of these accidents and incidents are the direct result of improper training or lack of training in checklist usage, thus we will emphasize checklist usage and discipline. This emphasis will help ensure safe and efficient operations at Rainier Flight Service and prepare for a professional career.

Most Checklists are to be accomplished using a do/verify method. The principal advantage of this method is redundancy. Configured once by memory and verified via checklist to catch any missed items. This method requires extensive practice to learn the flows.

Consistent with the do/verify philosophy a memorized flow check will be employed whenever completing normal and emergency procedures. The checklist will then be used to back up the flow. A memory guided flow by itself is unacceptable. Visual verification of what switches and controls are in the correct position when performing the checklist verification is mandatory.

Checklist Execution

1. State checklist title (i.e., “**Cruise Checklist**”)
2. Complete flow from memory.
3. Verify completion using checklist.
4. State checklist complete (i.e., “**Cruise Checklist Complete**”)

If a checklist becomes interrupted, the entire flow and checklist should be repeated. This will prevent an inadvertent missed item from the checklist that could be critical to flight.

Disclaimer: This Standardization Manual and RFS checklists are guidelines for safe operations of the aircraft. These are not sole sources of information. The PIC must refer to the appropriate POH, QRC and QRH for further information. RFS is not responsible for errors or omissions from these documents. In all instances the POH for the specific aircraft in question will be considered the final authority concerning the safe operations of that aircraft.

2. BRIEFINGS

Preflight / Departure Briefing (TPC)

A portion of the preflight briefing should include a discussion for the intended flight. The briefing should be interactive, concise, and focused on the big picture. Pilots jointly identify relevant threats, followed by the student presenting the departure plan and any other considerations.

T – Threats

- Student Identifies any relevant threats.
 - Refer to threat list on the QRC, if desired, and any airport-specific threats identified by NOTAMS, hotspots, etc.
- Instructor briefs any additional threats as needed.

P – Plan

- Brief the plan, focus on the relevant items including:
 - Taxi/Departure Runway
 - Takeoff Performance
 - Route (VFR departure procedure, SID, waypoints, etc.)
 - Emergency (Abnormal/Emergency on Takeoff, Departure, etc.)
 - Any mitigation strategies for identified threats.

C – Considerations

- Any other issues or considerations
- Recap critical threat / plan items as needed.

A thorough TPC briefing results in clear expectations while facilitating effective communication and ADM principles.

Passenger Briefing

If passengers are onboard (real or simulated) a Passenger Briefing shall be conducted to include:

- **S**- Seat Belt Use (FAR)
- **A**- Airsick Bags / Use of Air Vents
- **F** – Fire Extinguisher (FAR)
- **E**- Emergency Exits / Door Operation (FAR)
- **T**- Talking (Sterile Cockpit)
- **Y**- Any questions?

Takeoff Briefing

Prior to takeoff a Takeoff Briefing shall be conducted to confirm critical items are completed including:

- Aircraft Configuration
- Departure Route / GPS Programming
- Takeoff Emergency

Items specifically discussed during the TPC Briefing may be abbreviated 'As Briefed' provided conditions have not changed per original plan.

Approach Briefing (TPC)

The Approach Briefing should be completed prior to the Descent Checklist. The briefing should be interactive, concise, and focused on the big picture. Pilots jointly identify relevant threats, followed by the student presenting the arrival plan and any other considerations.

T – Threats

- Student Identifies any relevant threats.
 - Refer to threat list on the QRC, if desired, and any airport-specific threats identified by NOTAMs, hotspots, etc.
- Instructor briefs any additional threats as needed.

P – Plan

- Brief the plan, focus on the relevant items including:
 - Route (VFR arrival procedure, STAR, Approach, waypoints, etc.)
 - Fuel Status
 - Runway / Landing Performance / LTP / Exit / Taxi
 - Any mitigation strategies for identified threats.

C – Considerations

- Any other issues or considerations
- Recap critical threat / plan items as needed.

A thorough TPC briefing results in clear expectations while facilitating effective communication and ADM principles.

3. NORMAL PROCEDURES

3.1 BEFORE START



1. Departure Briefing – *PERFORM*
 - If not completed during Preflight Briefing, conduct now to cover all TPC elements.
2. Preflight Inspection – *PERFORM*
 - Can be completed by memory or read/do using QRH. Either way, QRH must be referenced to ensure all items are checked.
3. Passenger Briefing – *PERFORM*
 - Complete passenger briefing as appropriate for passenger experience and/or instructor request.
4. Seats/Belts – *ADJUST & LOCK*
 - Ensure seat belts are secure for all occupants.
5. Rudder Pedals – *ADJUST*
 - Spin wheel (between pedals) with foot in to shift forward or back.
6. Cabin Doors - *CHECK*
 - Primary Interior Door Latches - *LATCHED*
 - Secondary Interior Door Latches (if installed) - *LATCHED*
7. Brakes - *TEST and SET*
 - Push break pedals and pull parking brake to lock in place (unless freezing temps)
8. Fuel Shutoff – *ON*
 - Verify fuel shutoff in on position (full in)
9. Circuit Breakers – *IN*

- Verify all circuit breakers in. If the breaker is out and not collared, reference open discrepancies and inquire with maintenance as to equipment status.


10. Electrical Equipment – OFF

- Verify all switched in OFF position.

11. Avionics Switch – OFF

- Insure AVN switch is set to off, avoid electrical surge at start.

3.2 ENGINE START

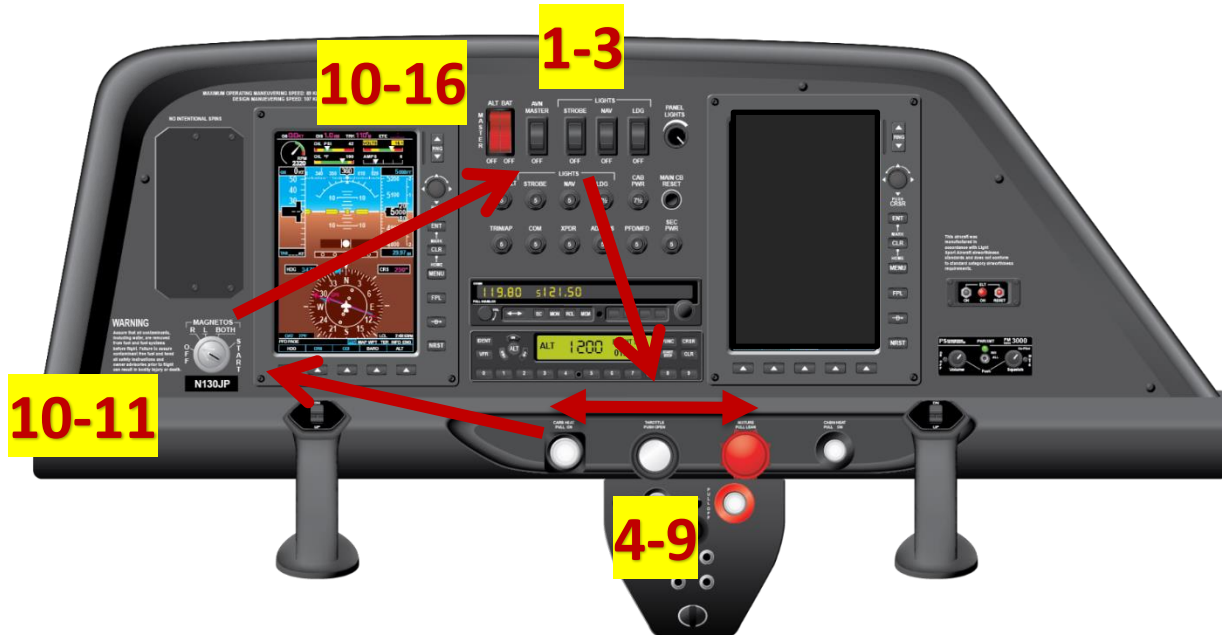

1. AVN MASTER Switch - CHECK (verify off)
 - Insure AVN switch is set to off, avoid electrical surge at start.
2. Master Switches – ON
 - Turn on both BATT and ALT switches.
3. Strobe – ON
 - This is an indication to people around the aircraft that engine start is imminent.
4. CARB HEAT Control Knob - OFF
 - Push full in
5. MIXTURE Control - FULL RICH
 - Push full in
6. Engine Indicating System - CHECK PARAMETERS
 - Verify no red X's through indicators.
7. VOLTS - CHECK EIS ENGINE PAGE
8. AMPS - CHECK
 - Verify discharge shown (negative))
9. Prime – *AS REQUIRED*
 - IF ENGINE COLD
 - i. THROTTLE Control - PUMP (3 to 6 strokes)
 - ii. THROTTLE Control - OPEN 1/4 INCH
 - IF ENGINE WARM
 - i. THROTTLE Control - PUMP ONCE (push full in and pull full out)
 - ii. THROTTLE Control - CLOSED

10. Prop Area – CLEAR

- Verify that all people and equipment are at a safe distance from the prop.

11. Magnetos – START

- Engage the starter until the engine is running. Once running, release the ignition key.

12. Oil Pressure - CHECK

- Verify that oil pressure increases above PSI into the YELLOW BAND range in 30 seconds.

13. THROTTLE Control - REDUCE TO IDLE

- Idle engine at 1,000 to stabilize combustion. Excessive RPM can cause damage to engine components and too little RPM may cause engine to die until warm.

14. AMPS - CHECK

- Verify charge shown (positive))

15. NAV Light Switch - ON

- As required given time of day

16. STROBE Light Switch – OFF

- Off for taxi to prevent hazard to other aircraft.

3.3 AFTER START



1. Avionics Switches – ON
 - Turn on AVN Switch to supply power to avionics equipment.
2. Lights – *AS REQUIRED*
 - Turn Strobe Lights off, Nav Lights on as appropriate for conditions.
 - More lighting helps other aircraft see and avoid you.
 - At night or when operating in low visibility, it is acceptable to leave Strobe lights off to reduce disorientation.
3. Circuit Breakers – CHECK
 - Verify all circuit breakers are in and none popped during engine start process.
4. Mixture – LEAN
 - Reduce mixture to ‘rich of dead’. This helps prevent excess fuel from causing spark plug fouling at low power settings.
5. Flaps – RETRACT
 - Retract flaps to up setting while taxiing on ground.
6. ATIS/AWOS – *OBTAIN*
 - Listen to and record current weather and NOTAMs.
7. Transponder – *SET ALT / 1200*
 - Most aircraft default to ALT when power applied and 1200 code. Verify or configure as appropriate.

3.4 BEFORE TAKEOFF



1. Parking Brake - SET
 - Brakes - APPLY
 - PARKING BRAKE Control Knob - ON (pull full out)
2. Rudder Pedals and Seat Belts - ADJUST and SECURE
 - Adjust when by rudder pedals forward or backwards as necessary.
3. Seats and Seat Belts - CHECK SECURE
 - Seatbelts should be secured from start up.
4. Cabin Doors - CHECK
 - Primary Interior Door Latches - LATCHED
 - Secondary Interior Door Latches (if installed) - LATCHED
5. Flight Controls - FREE and CORRECT
 - Full range of movement, not hitting pilot legs or equipment.
6. Flight Instruments (PFD) - CHECK (no red X's)
 - Red X on PFD indicates instrument failure and should be diagnosed per the POH/QRH. Required instruments (91.205, KOEL) with a red X deem the aircraft not airworthy.
7. Engine Indicating System - CHECK PARAMETERS
 - Verify no red X's through indicators.
8. Altimeters -SET
 - PFD (BARO) – SET
9. Fuel Quantity Indicators – CHECK
 - Verify level is correct and check periodically throughout flight (No digital warning!)

10. Elevator Trim Control - SET FOR TAKEOFF

- Digital trim indicator on MFD

11. Mixture Control – RICH

- Increase fuel flow to engine during run up.

3.5 ENGINE RUNUP



1. THROTTLE Control - 1700 RPM
 - ONLY once oil temperature is above 75°F and oil pressure in green band range.
2. MAGNETOS Switch - CHECK
 - RPM drop should not exceed 150 RPM on either magneto or 50 RPM differential between magnetos.
3. Engine Indicators – CHECK
 - All indicators showing green readings.
4. CARB HEAT Control Knob - ON
 - Pull full out.
 - Engine RPM - CHECK (verify RPM decreases)
 - CARB °F - CHECK (verify temp increases)
5. CARB HEAT Control Knob - OFF
 - Push full in
6. Annunciators - CHECK
 - Verify no annunciators are shown
7. THROTTLE Control - CHECK IDLE
 - 800 RPM or LESS
8. THROTTLE Control Friction Lock – ADJUST
 - Grooved circle around throttle can be twisted to adjust resistance.
9. Mixture – LEAN
 - Lean mixture while aircraft at idle to finish checks, taxi to the runway.

10. COM Frequency – SET

- Set ground/tower frequency in COM, next frequency (i.e. practice area) as STBY.

11. GPS Flight Plan - AS DESIRED

- Add new waypoints entered as needed.

12. Transponder – SET

- 1200 for VFR flight, or squawk code as assigned by ATC.

13. Departure Briefing – *PERFORM*

- Brief departure and emergency procedures applicable to flight plan

3.6 TAKEOFF



1. Cabin Doors - CHECK
 - Primary Interior Door Latches - LATCHED
 - Secondary Interior Door Latches (if installed) - LATCHED
2. Wing Flaps - UP - 10° (10° preferred per POH)
 - Set flaps as appropriate for required takeoff performance (10° Short field/Soft field)
3. Lights – ON
 - Daytime: Beacon, Strobe; Nighttime: Beacon, Nav, Strobe, Landing
4. XPRD – SET
 - 1200 for VFR flight, or squawk code as assigned by ATC.
5. Mixture Control – RICH
 - Confirm full rich for takeoff.
6. CARB HEAT Control Knob - OFF
 - Push full in
7. Throttle Control - FULL
 - Smoothly push full in
8. Elevator Control – ROTATE @ Vr = 50 KIAS
 - Apply back pressure to lift nose wheel at Vr

3.7 CLIMB



1. Climb Airspeed – PITCH FOR $V_y = 62$ KIAS
 - Smoothly pitch to V_y for stable climb
2. Elevator Trim Control – ADJUST
 - Trim for 65 - 75 KIAS as necessary to relieve pressure on controls.
3. Wing Flaps – RETRACT
 - Flaps up at safe altitude while maintaining stability.
4. Mixture Control - RICH
 - Above 3,000 feet pressure altitude, lean for maximum RPM.

3.8 CRUISE

1. Power - 2400 - 2750 RPM
 - No more than 75% of power recommended.
2. Elevator Trim Control – ADJUST
 - Trim to relieve pressure on controls while holding altitude at chosen power setting.
3. Mixture Control - LEAN
 - For desired performance or economy

3.9 DESCENT



1. ATIS / AWOS / NOTAMS – OBTAINED
 - Ensure all local weather and airport information are obtained for arrival.
2. Altimeters – PFD (BARO) – SET, Standby Altimeter – SET
 - Adjust to local altimeter setting.
3. Power - AS DESIRED
 - Adjust power based on airspeed and rate of descent required.
4. Mixture – ADJUST
 - As necessary to make the engine run smoothly.

3.10 LANDING



1. Seats and Seat Belts - SECURED and LOCKED
 - Ensure pilot and all pax seatbelts fastened.
2. Rudder Pedals and Seat Belts - ADJUST and SECURE
 - Ensure full range of motion with seatbelts secured.
3. MIXTURE Control - RICH
 - Push full in below 3000 feet pressure altitude.
4. CARB HEAT Control Knob - ON
 - Pull full out.
 - Apply full heat before reducing power.
5. LDG Light Switch - ON

3.11 AFTER LANDING



1. Wing Flaps – RETRACT
 - Flaps up for taxi.
2. CARB HEAT Control Knob - OFF
 - Push full in
3. Mixture – LEANED
 - Lean mixture for ground operations
4. COM Frequencies – SET
 - Monitor ground / Unicom frequencies or however advised by ATC.
5. Lights – AS NEEDED
 - Landing and strobe lights off to avoid limiting visuals for other aircraft & equipment.

3.12 PARKING / SECURING



1. Electrical Equipment – OFF
 - Turn off all lights, except leaving strobe on while securing aircraft.
2. AVIONICS Switch – OFF
 - Switch AVN to off, turns off MFD.
3. Mixture Control - IDLE CUTOFF (pull full out)
 - Fully exhaust engine of fuel flow before turning off mags for safe ground operations.
4. MAGNETOS Switch – OFF & KEYS REMOVED
 - Keys switch off and placed on the dash to confirm removal.
5. Hobbs / Tach Time – RECORDED
 - Record Hobbs (Total) and Tach (Engine) time for aircraft logbook and check in.
6. MASTER Switch (ALT and BAT) – OFF
 - Confirm switched to off.
7. Control Lock – INSTALL
 - Ensure control lock pin secured in the yoke.
8. External Gust Locks – INSTALL
 - Flap guards for both wings installed post-flight.

4. VFR FLIGHT MANEUVERS

Objective

To develop the pilot's proficiency on normal and crosswind takeoffs and landings, short-field takeoffs and landings, soft-field takeoffs, and landings, 180° power-off accuracy approaches and landings, go-arounds, and airport traffic patterns.

References

- AC 90-66x: Recommended Standard Traffic Patterns and Practices for Aeronautical Operations at Airports without Operating Control Towers
- FAA-H-8083-3x: Airplane Flying Handbook
- Cessna Model 162 Pilot's Operating Handbook
- Airmen Certification Standards

4.1 MANEUVER: Airport Traffic Pattern

Objective


To develop the pilot's knowledge of the rules and procedures involved with airport traffic patterns.

Description

A traffic pattern has rules and procedures designed to assure that air traffic flows into and out of an airport in an orderly manner. It is established appropriate to the local conditions, including: the altitude to be flown, the wind direction, the direction and placement of the pattern, and the procedures for entering and leaving the pattern. Pilots should make all turns to the left, unless otherwise indicated.

Teaching Considerations

- Division of attention.
- Compliance with ATC instructions.
- Adequate spacing between other traffic operating in the traffic pattern.
- All legs of the traffic pattern should be approximately 3/4 mile from the runway.
- Wind drift correction/ground track considerations.
 - Application of ground reference maneuvers to traffic pattern operations.
- Appropriate radio calls at controlled/uncontrolled airports.
- Use of the Chart Supplement for airport operations.
- Wind shear and wake turbulence.

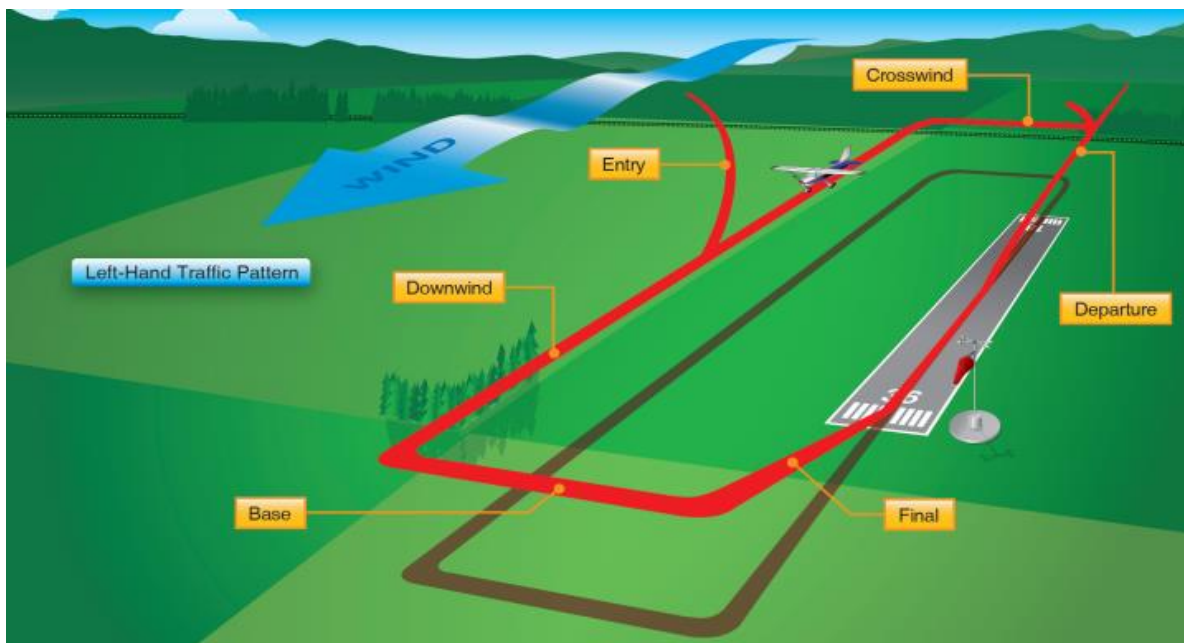

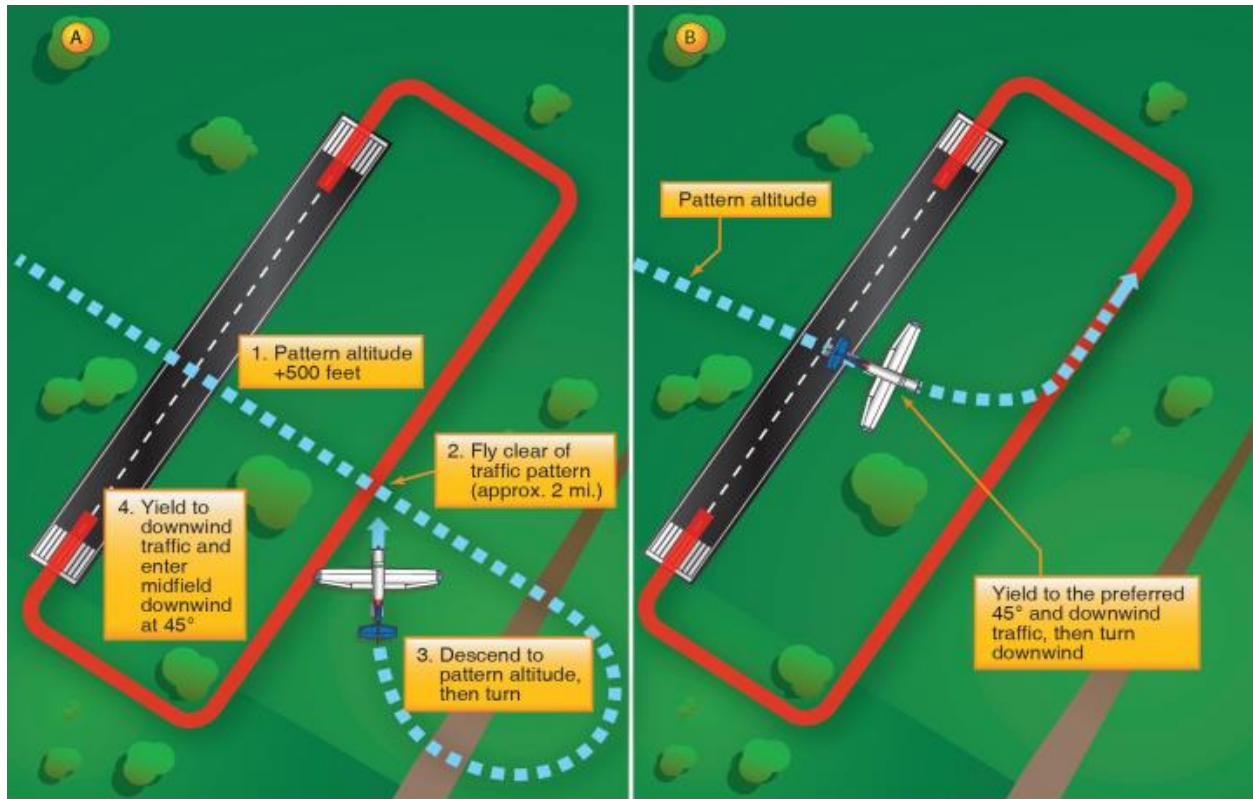


Figure 8-3. Preferred entry from upwind leg side of airport (A). Alternate midfield entry from upwind leg side of airport (B).

Set-up

- Determine the Traffic Pattern Altitude (TPA).
- Determine the wind direction, runway, traffic pattern direction, and any existing traffic using any or all of the following:
 - ATIS, AWOS, ASOS, windsock, etc.
 - Radio communication.
 - Airport overflight at 500 feet above the TPA. Do not descend to TPA until well clear of the pattern.
- Enter the traffic pattern at a 45° angle to the downwind leg at TPA.
- The downwind leg should be approximately 3/4 mile from the runway.
- Apply proper wind correction angle for a ground track parallel to the runway.
- Initiate Before Landing Checklist by mid-field downwind or 2 miles from the runway threshold if entering on base or final leg.
- Select aiming point using the following prioritized criteria.
 - Abeam visual glideslope indicator (PAPI, VASI).
 - Aiming point (runway marking, surface feature, etc.).
 - At least 200 feet beyond threshold, within first 1/3 of the runway.

Execution

- Maintain recommended approach speeds throughout the pattern.
 - Pattern Entry - 80 KIAS
 - Downwind - 80 KIAS
 - Base - 70 KIAS
 - Final - 60 KIAS
 - Short Final (Speed appropriate for flaps, wind, and go-around)

NOTE: Change in airspeed should be continual throughout the traffic pattern.

NOTE: If landing with zero flaps, final approach speed should be increased by 9 KIAS.

- Abeam the aiming point - Apply carburetor heat, reduce power setting.
- The base leg begins 45° from the aiming point.
- Coordinate final turn to rollout on the runway centerline.
- Establish a stabilized approach by 200 feet AGL and *verbalize*:
 - Check – All checklists are complete
 - F – Flight path correct (on centerline)
 - L – Landing configuration correct
 - A – Airspeed (+5/-0)
 - P – Power setting appropriate for aircraft configuration
 - S – Sink rate is not abnormal (on glidepath)

NOTE: Changing conditions require adjustments of speed and flap settings, i.e. wind gust factors, ATC.

- If a stabilized approach is not attained by 200 feet AGL, a go-around must be conducted.

Closed Traffic Procedures

- Continue on the upwind leg until reaching a point beyond the departure end of the runway and within 300 feet of TPA.
- Continue with specified traffic pattern procedures listed above.
- If leaving the pattern, the pilot should continue straight ahead or depart by making a 45° left turn (right turn for right hand pattern) after reaching TPA.

NOTE: When operating at a tower-controlled airport, ATC may alter standard traffic pattern operations.

4.2 MANEUVER: Normal/Crosswind Takeoff and Climb

Objective


To develop the pilot's proficiency on normal and crosswind takeoffs, and climbs.


Description

The takeoff and climb involve the movement of the airplane from its starting position on the runway to the point where a positive climb to a safe maneuvering altitude has been established.

Teaching Considerations

- PAVE Checklist
- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude.
 - Appropriate climb airspeed.
- Calculation and use of takeoff performance data.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Aborted takeoff before and after liftoff.
- Wind shear and wake turbulence.
- Importance of completing checklists.
- Methods for checking for traffic used in a high wing aircraft.

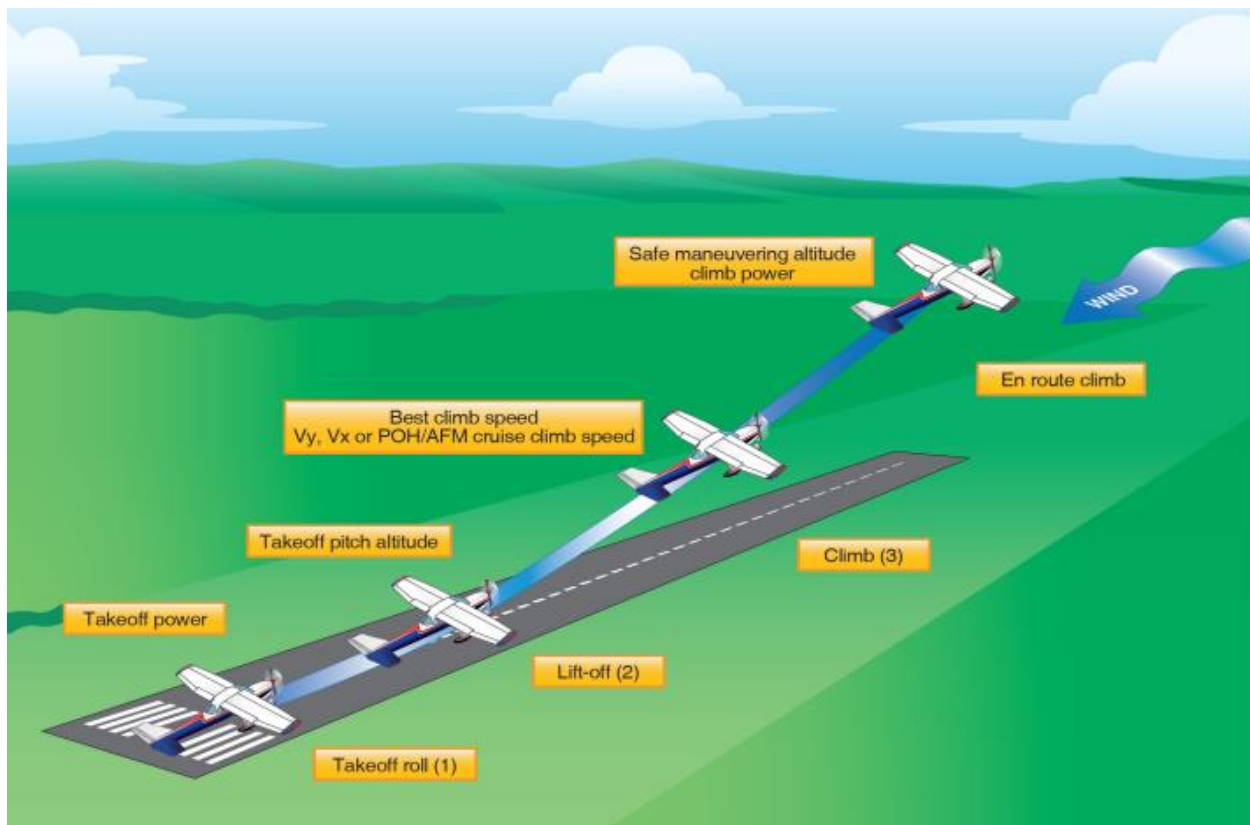

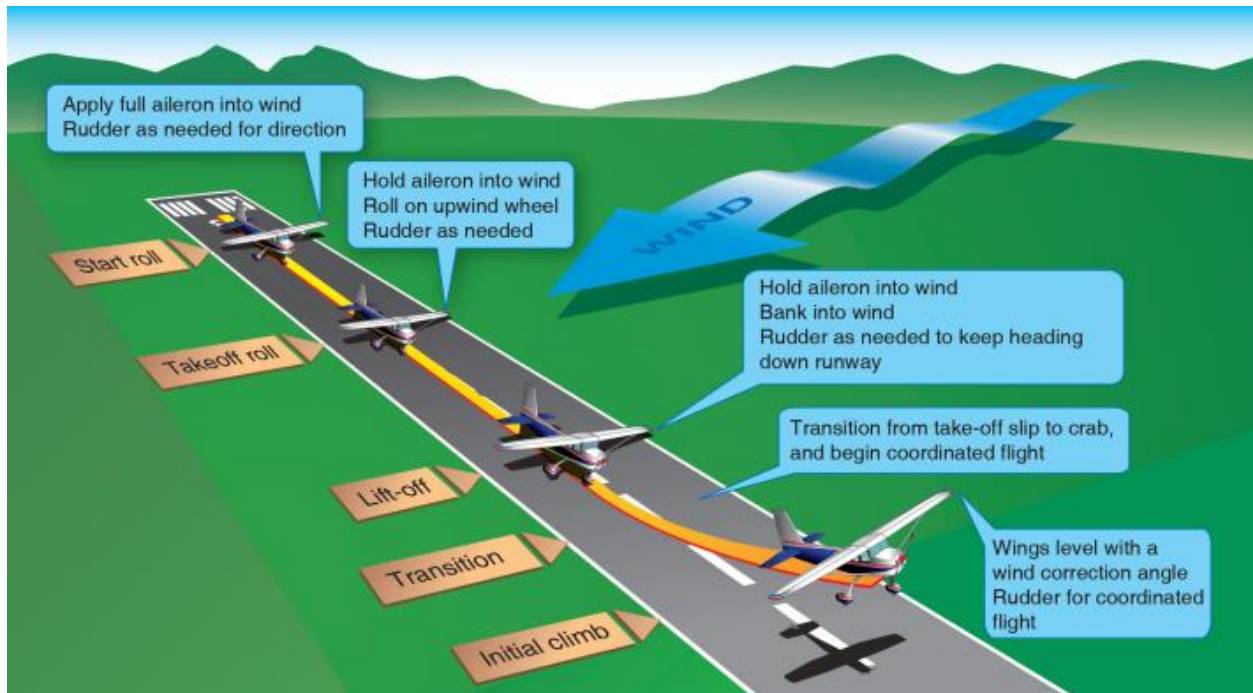

Set-up

- Set the wing flap setting to 0°.
- Adjust the mixture, obtaining maximum engine performance for the existing conditions (full rich below 3,000 feet, leaned for best power above 3,000 feet pressure altitude).
- Review takeoff performance capabilities and consider obstructions and conditions.
- Verify the final approach and takeoff path are clear of other aircraft.
- Align the airplane on the runway centerline.
- Verify that the heading indicator is aligned with the runway heading.
- Confirm that the runway heading corresponds with the intended runway of use.
- Apply aileron deflection properly for crosswind conditions.

Execution

- Advance the throttle smoothly to maximum power.
- Check engine instruments and annunciators.
- Adjust aileron deflection during acceleration.
- Liftoff at computed airspeed.
- Establish the pitch attitude for and accelerate to V_y or appropriate speed for altitude.
- Maintain directional control and proper wind drift correction throughout the takeoff and climb.
- At 1,000 feet AGL verify the climb flow pattern/checklist complete.

4.3 MANEUVER: Normal/Crosswind Approach and Landing

Objective



To develop the pilot's proficiency on normal and crosswind approaches and landings.


Description

The landing involves the transition from the airport traffic pattern to the end of the landing roll.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude on landing distance.
 - Obstructions or hazards.
 - Landing performance data and limitations.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Wind shear or wake turbulence.
- Effect of flaps on approach and landing.
- Effective use of brakes consistent with safety.
- Timely execution of go-around, if necessary.
- Importance of completing checklists.
- Importance of adjusting seat to appropriate position.
- Appropriate speed for turning off the runway.

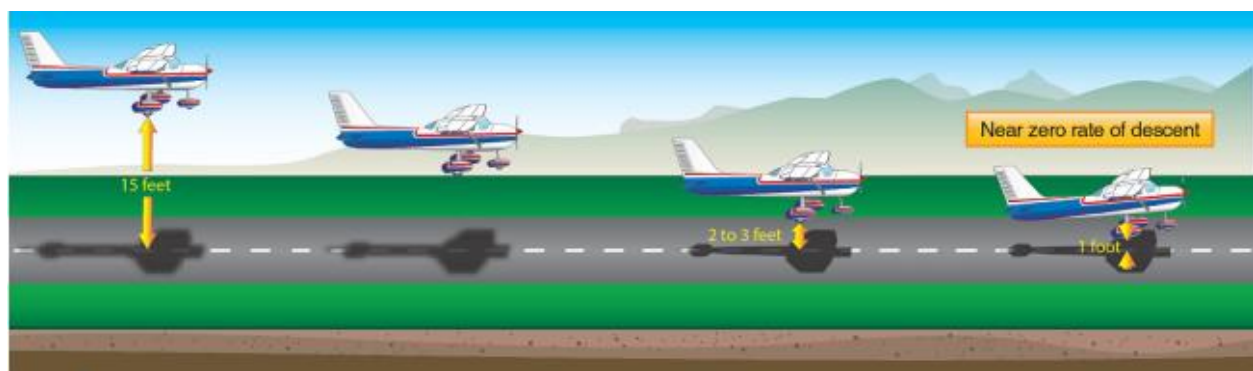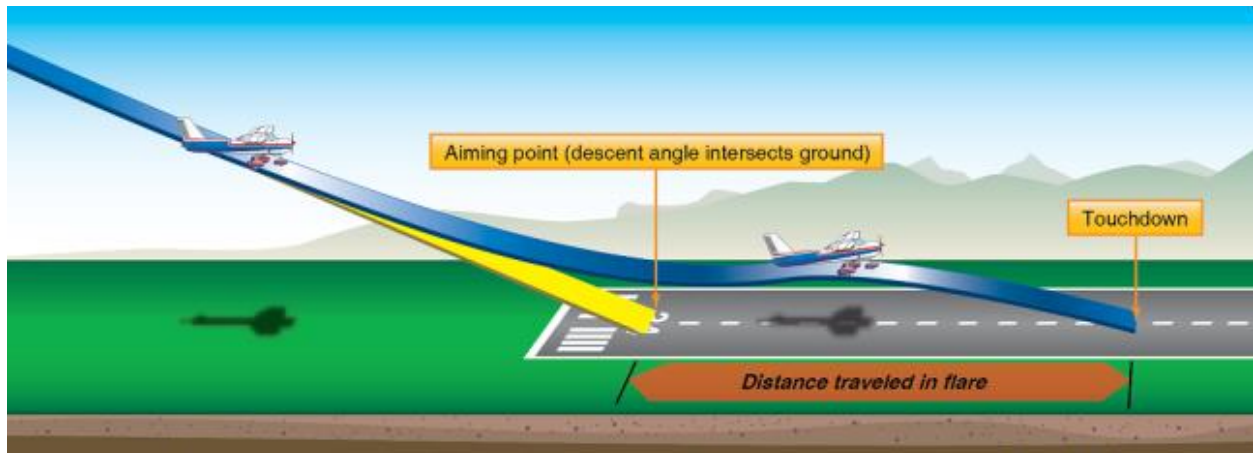

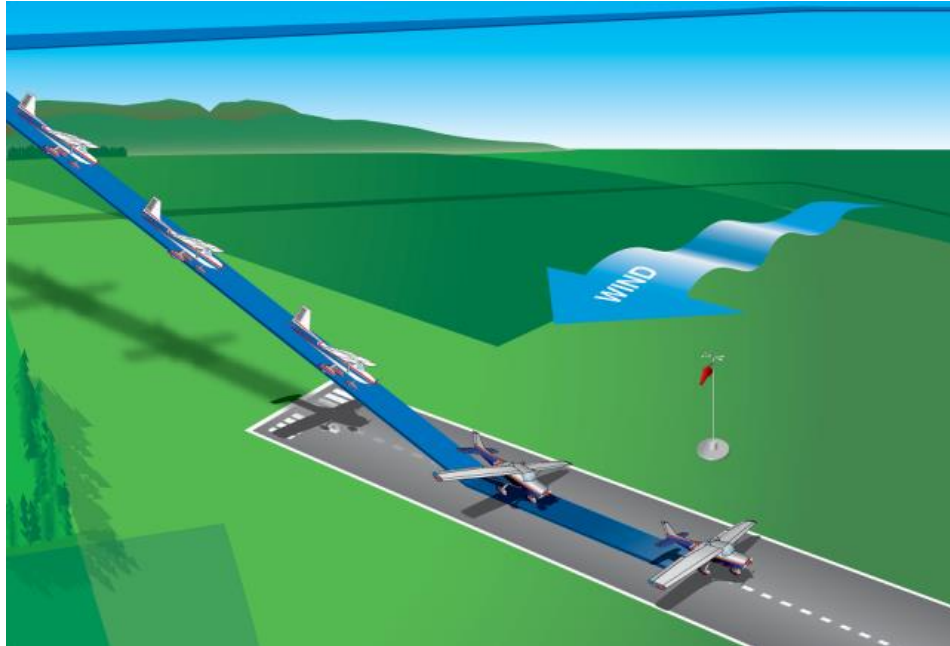

Set-up

- Establish the recommended approach and landing configuration and airspeed (see Airport Traffic Pattern).
- Select an aiming point using the following prioritized criteria.
 - Abeam visual glideslope indicator (PAPI, VASI).
 - Aiming point marking (1,000-foot marker).
 - At least 200 feet beyond threshold, within first 1/3 of the runway.

Execution

- Apply proper crosswind correction for landing.
- Establish a stabilized approach by 200 feet AGL and *verbalize*:
 - A stabilized approach is:
 - Check – All checklists are complete
 - F – Flight path correct (on centerline)
 - L – Landing configuration correct
 - A – Airspeed (+5/-0)
 - P – Power setting appropriate for aircraft configuration
 - S – Sink rate is not abnormal (on glidepath)

NOTE: Flight control inputs on final are used to maintain an already stabilized approach path.

NOTE: Changing conditions require adjustments of speed and flap settings, i.e. wind gust factors, ATC.

- If landing with the flaps up, increase approach speed by 9 KIAS.
- Begin the round out at approximately 10–20 feet above the ground, smoothly transitioning to a landing pitch attitude and decrease airspeed.
- Touchdown on main gear first at approximate stalling speed with no drift and with the airplane's longitudinal axis aligned with the runway/landing path.
- Maintain centerline using proper crosswind technique.

4.4 MANEUVER: Soft-Field Takeoff and Climb

Objective


To develop the pilot's ability to obtain maximum performance from the airplane while performing a soft field takeoff.

Description

Takeoffs and climbs from soft fields require operational techniques for getting the airplane airborne as quickly as possible to eliminate drag caused by tall grass, soft turf, mud, snow, etc.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude.
 - Appropriate climb speed.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Aborted takeoff before and after liftoff.
- Wind shear and wake turbulence.
- Importance of completing checklists.
- Methods for checking for traffic used in a high wing aircraft.

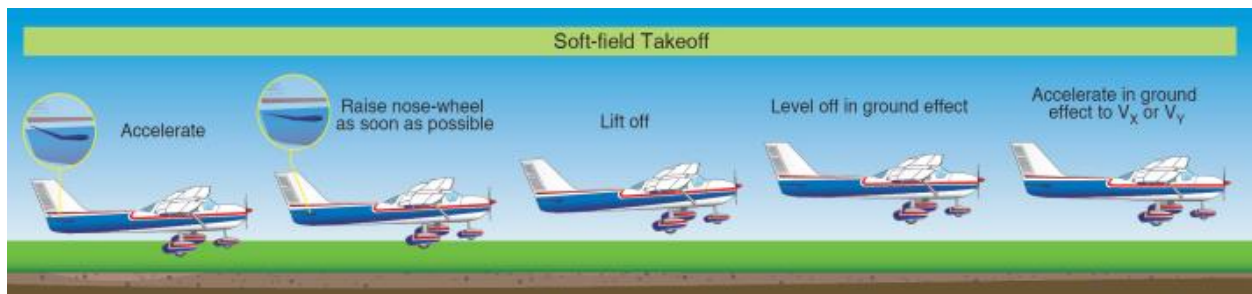

Set-up

- Review takeoff performance capabilities, considering obstructions and conditions.
- Select the wing flap to POH recommended setting.
- Adjust the mixture, obtaining maximum engine performance for the existing conditions (full rich below 3,000 feet, leaned for best power above 3,000 feet pressure altitude).
- Verify the final approach and takeoff path are clear of other aircraft.
- Position the airplane on the takeoff path without coming to a complete stop.
- Verify that the heading indicator is aligned with the runway heading.
- Confirm that the runway heading corresponds with the intended runway of use.
- Apply aileron deflection properly for crosswind conditions.
- When departing with an aft CG loading, elevator trim should be adjusted slightly nose down.

Execution

- Advance the throttle smoothly to maximum power.
- Check engine instruments and annunciators.
- Adjust aileron deflection during acceleration.
- Adjust and maintain a pitch attitude that transfers the weight from the wheels to the wings as rapidly as possible.
- Liftoff at the lowest possible airspeed and remain in ground effect while accelerating to V_x or V_y , as appropriate.
- Establish the pitch attitude for V_x or V_y , as appropriate, and maintain selected airspeed during the climb.
- Retract the wing flaps to up at a safe altitude and after a positive rate of climb is established.
- Maintain directional control and proper wind drift correction throughout the takeoff and climb.
- At 1,000 feet AGL verify the climb flow pattern/checklist complete.

4.5 MANEUVER: Soft-Field Approach and Landing

Objective


To develop the pilot's ability to obtain maximum performance from the airplane while performing a soft field landing.

Description

Approach and landings to soft fields require the pilot to control the airplane in a manner that the wings support the weight of the airplane as long as practical. This minimizes drag and stress imposed on the landing gear by the rough or soft surface.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude on landing distance.
 - Obstructions or hazards.
 - Landing performance data and limitations.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Wind shear or wake turbulence.
- Effect of flaps on approach and landing.
- Timely execution of go-around if necessary.
- Importance of completing checklists.
- Importance of adjusting seat to appropriate position.

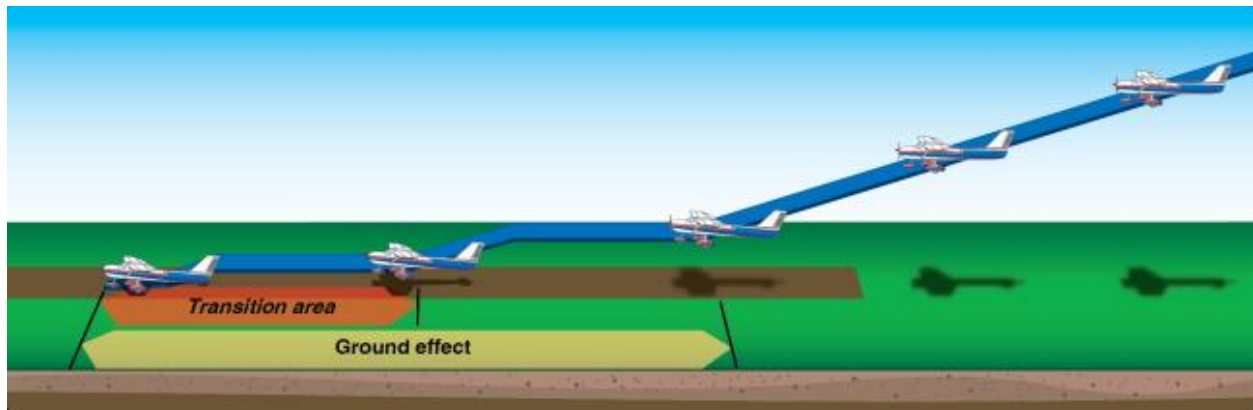

Set-up

- Establish the recommended approach and landing configuration and airspeed (see Airport Traffic Pattern).
- Select an aiming point using the following prioritized criteria.
 - Abeam visual glideslope indicator (PAPI, VASI).
 - Aiming point marking (1,000-foot marker).
 - At least 200 feet beyond threshold, within first 1/3 of the runway.

Execution

- Apply proper crosswind correction for landing.
- Establish a stabilized approach by 200 feet AGL and *verbalize*:
 - A stabilized approach is:
 - Check – All checklists are complete
 - F – Flight path correct (on centerline)
 - L – Landing configuration correct
 - A – Airspeed (+5/-0)
 - P – Power setting appropriate for aircraft configuration
 - S – Sink rate is not abnormal (on glidepath)

NOTE: Flight control inputs on final are used to maintain an already stabilized approach path.

NOTE: Changing conditions require adjustments of speed and flap settings, i.e. wind gust factors, ATC.

- Begin the round out at approximately 10–20 feet above the ground, smoothly transitioning to a landing pitch attitude.
- Use a slight amount of power to hold the airplane 1 to 2 feet off the surface in ground effect while gradually dissipating forward speed.
- Fly the airplane onto the ground and touchdown at the slowest possible airspeed with the weight fully supported by the wings.
- Touchdown on main gear first softly with no drift and with the airplane's longitudinal axis aligned with the runway/ landing path.
- Maintain centerline using proper crosswind technique.
- After touchdown hold sufficient back elevator pressure to keep the nose wheel off the surface.
- Power as required to keep airplane moving at a safe ground maneuvering speed.

4.6 MANEUVER: Short-Field Takeoff and Climb

Objective


To develop the pilot's ability to obtain maximum performance from the airplane while performing a short field takeoff and clearing all obstacles in the departure path safely.

Description

Takeoffs and climbs from fields where the takeoff area is short or restricted by obstructions require that the airplane be flown at the limit of its takeoff performance capabilities.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude.
 - Appropriate climb airspeed.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Aborted takeoff before and after liftoff.
- Wind shear and wake turbulence.
- Importance of completing checklists.
- Methods for checking for traffic used in a high wing aircraft.

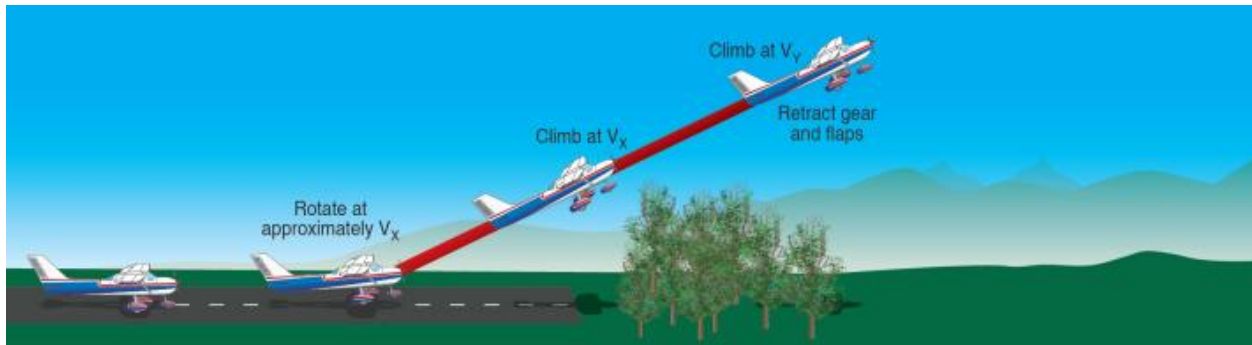

Set-up

- Select the wing flaps to POH recommended setting.
- Adjust the mixture, obtaining maximum engine performance for the existing conditions (full rich below 3,000 feet, leaned for best power when above 3,000 feet pressure altitude).
- Review takeoff performance capabilities considering obstructions and conditions.
- Verify the final approach and takeoff path are clear of other aircraft.
- Position the airplane for maximum runway availability and align it with the runway centerline.
- Verify that the heading indicator is aligned with the runway heading.
- Confirm that the runway heading corresponds with the intended runway of use.
- Apply aileron deflection properly for crosswind conditions.

Execution

- Apply brakes and advance the throttle smoothly to maximum power.
- Check engine instruments and annunciators.
- Release brakes.
- Adjust aileron deflection during acceleration, as required.
- Liftoff at POH computed airspeed.
- Accelerate and climb at 55 KIAS until all obstacles are cleared.
- Retract the wing flaps slowly at or above 60 KIAS at a safe altitude and after a positive rate of climb is established.
- Establish the pitch attitude for and accelerate to V_y during the climb.
- Maintain directional control and proper wind drift correction throughout the takeoff and climb.
- At 1,000 feet AGL verify the climb flow pattern/checklist complete.

4.7 MANEUVER: Short-Field Approach and Landing

Objective

To develop the pilot's ability to obtain maximum performance from the airplane while performing a short field landing and clearing all obstacles in the approach path.

Description

Approaches and landings to fields where the landing area is short or restricted by obstructions require that the airplane be flown at the limit of its landing performance capabilities.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Effect of density altitude and required landing distance.
 - Obstructions or hazards.
 - Landing performance data and limitations.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Wind shear or wake turbulence.
- Effect of flaps on approach and landing.
- Effective use of brakes consistent with safety and controllability.
- Timely execution of go-around if necessary.
- Importance of completing checklists.
- Importance of adjusting seat to appropriate position.

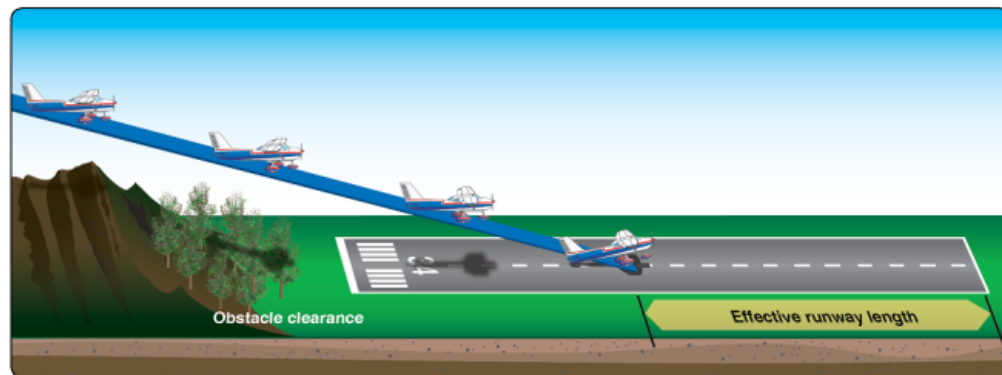


Figure 9-20. Landing over an obstacle.

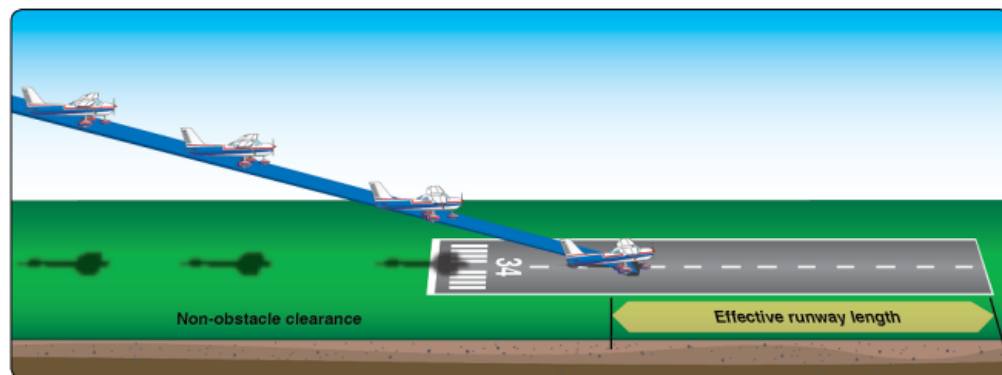


Figure 9-21. Landing on a short field.

Set-up

- Establish the recommended approach and landing configuration and airspeed (see Airport Traffic Pattern).
- Select an aiming point using the following prioritized criteria.
 - Abeam visual glideslope indicator (PAPI, VASI).
 - Aiming point marking (1,000-foot marker).
 - At least 200 feet beyond threshold, within first 1/3 of the runway.

Execution

- Apply proper crosswind correction for landing.
- Establish a stabilized approach by 200 feet AGL and *verbalize*:
 - A stabilized approach is:
 - Check – All checklists are complete
 - F – Flight path correct (on centerline)
 - L – Landing configuration correct
 - A – Airspeed (+5/-0)
 - P – Power setting appropriate for aircraft configuration
 - S – Sink rate is not abnormal (on glidepath)

NOTE: Flight control inputs on final are used to maintain an already stabilized approach path.

NOTE: Changing conditions require adjustments of speed and flap settings, i.e., wind gust factors, ATC.

- Airspeed between 60-70 KIAS (Flaps up).
- Wing Flaps full.
- Airspeed – 50 KIAS until flare.
- Reduce power to idle after clearing obstacles.
- The initiation of the round out or flare needs to be judged accurately to avoid flying into the ground or stalling prematurely and sinking rapidly.
- Touchdown on main gear first with no drift and with the airplane's longitudinal axis aligned with the runway/landing path. Touchdown should occur at the minimum controllable airspeed with the airplane in the pitch attitude that results in a power-off stall when the throttle is closed
- Maintain centerline using proper crosswind technique.
- Smoothly apply optimum disc and aerodynamic braking to stop in the shortest possible distance consistent with safety and controllability.
- Wing flaps up.

4.8 MANEUVER: 180° Power-Off Accuracy Approach and Landing

Objective


To instill in the pilot the judgment in estimating distances and glide ratios, and the procedures necessary for accurately flying the airplane without power to a safe landing.

Description

The 180° power-off approach is executed by gliding with the power off from a given point on a downwind leg to a preselected landing spot.

Teaching Considerations

- Planning and orientation.
 - Runway length, width, and surface condition.
 - Obstructions or hazards.
 - Landing performance data and limitations.
 - Ability to estimate distance and the required ability to maintain the proper glide while maneuvering the airplane.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Wind shear or wake turbulence.
- Effect of flaps on approach and landing.
- Effective use of brakes consistent with safety.
- Timely execution of go-around if necessary.
- Importance of completing checklists.
- Importance of adjusting seat to appropriate position.

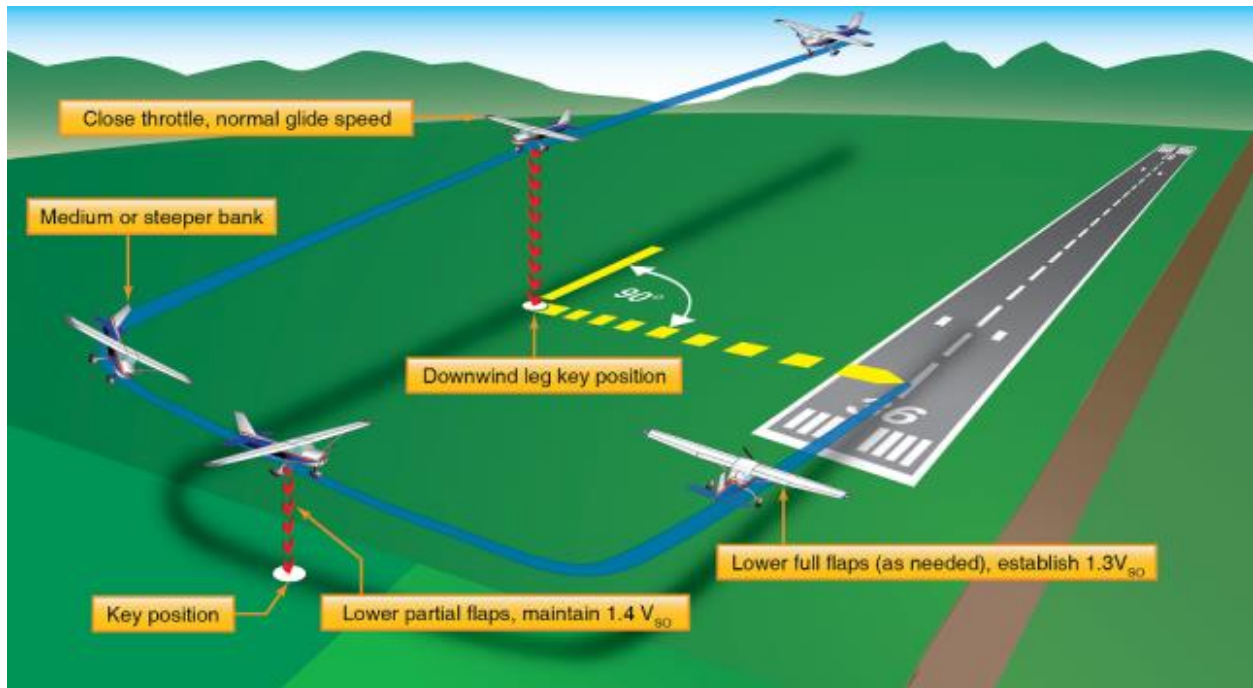

Set-up

- The airplane must be on the downwind leg parallel to the landing runway, and no greater than 1,000 feet AGL.
- The airplane should be flown onto a downwind leg at the same distance from the landing surface as in a normal traffic pattern (see Airport Traffic Pattern).
- Select an aiming point using the following prioritized criteria.
 - Abeam visual glideslope indicator (PAPI, VASI).
 - Aiming point marking (1,000-foot marker).
 - At least 200 feet beyond threshold, within first 1/3 of the runway.

Execution

- Abeam the specified landing spot apply carburetor heat and close the throttle.
- Establish the best glide airspeed.
- The approach path may be varied by positioning the base leg closer to or farther out from the approach end of the runway according to wind conditions.
- The turn from the downwind leg to the base leg should be a uniform turn with a medium or slightly steeper bank.
- The base-to-final turn should be planned and accomplished so that upon rolling out of the turn the airplane shall be aligned with the runway centerline.
- Apply proper crosswind correction for landing.
- Begin the round out at approximately 10–20 feet above the ground, smoothly transitioning to a landing pitch attitude.
- Maintain centerline using proper crosswind technique.

NOTE: Adjust best glide speed for flap configuration.

4.9 MANEUVER: Forward Slip to a Landing

Objective


To develop the pilot's proficiency at performing a forward slip to a landing.

Description

Forward slips are used to dissipate altitude without increasing airspeed.

Teaching Considerations

- Obstructions or hazards.
- Importance of maintaining airspeed.
- Aircraft limitations.

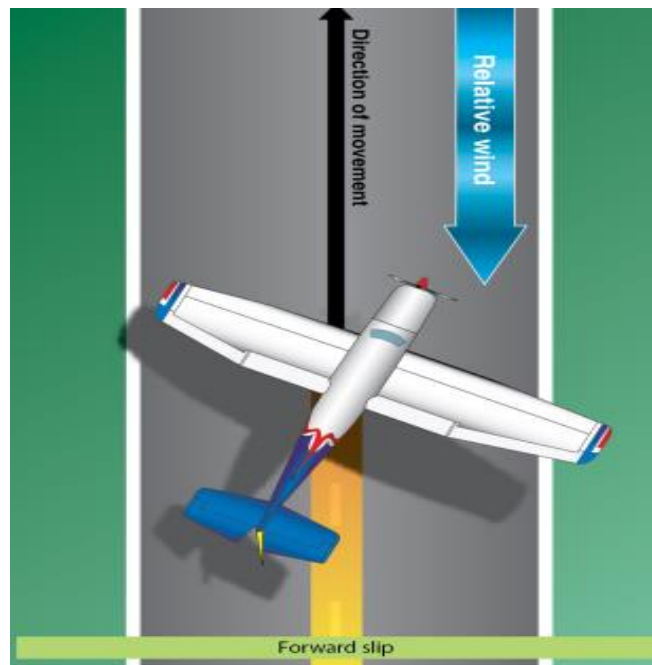

Execution

- Reduce throttle to idle.
- Establish the recommended approach and landing configuration and airspeed (see Airport Traffic Pattern).
- Lower upwind wing.
- Apply the opposite rudder to prevent the airplane from turning in the direction of the lowered wing.
- Allow the nose of the airplane to be pointed away from the runway.
- Maintain a ground track aligned with the runway centerline.
- Once an acceptable altitude has been attained, the slip may be discontinued.
- Continue with a normal, short-field, soft-field, or power-off landing.

4.10 MANEUVER: Go-Around/Rejected Landing

Objective


To develop the pilot's ability to safely execute a go-around from an unsafe landing.

Description

Whenever landing conditions are not satisfactory, a go-around is warranted. The go-around is not strictly an emergency procedure. It is a normal maneuver that may be used in an emergency. Although the need to discontinue a landing may arise at any point in the landing process, the most critical go-around will be one started when close to the ground. A go-around/rejected landing must be executed if a stabilized approach is not achieved by 200 feet AGL.

Teaching Considerations

- An immediate go-around must be executed if any of the following conditions are encountered:
 - Over/undershooting runway or aim point
 - Aircraft/Vehicle/People/Objects on runway
 - ATC instructions
 - High roundout
 - Late or rapid roundout
 - Excessive floating
 - Ballooning
 - Bouncing
 - Porpoising
 - Windshear
 - Any other factor placing successful landing in doubt.
- Prompt decision making.
- Anyone may make a call to abort a landing and must be adhered to.
- Failure to apply full power.
- Failure to control pitch to slow or stop descent.
- Wind shear or wake turbulence.
- Stall/spin awareness.
- Importance of completing checklists.

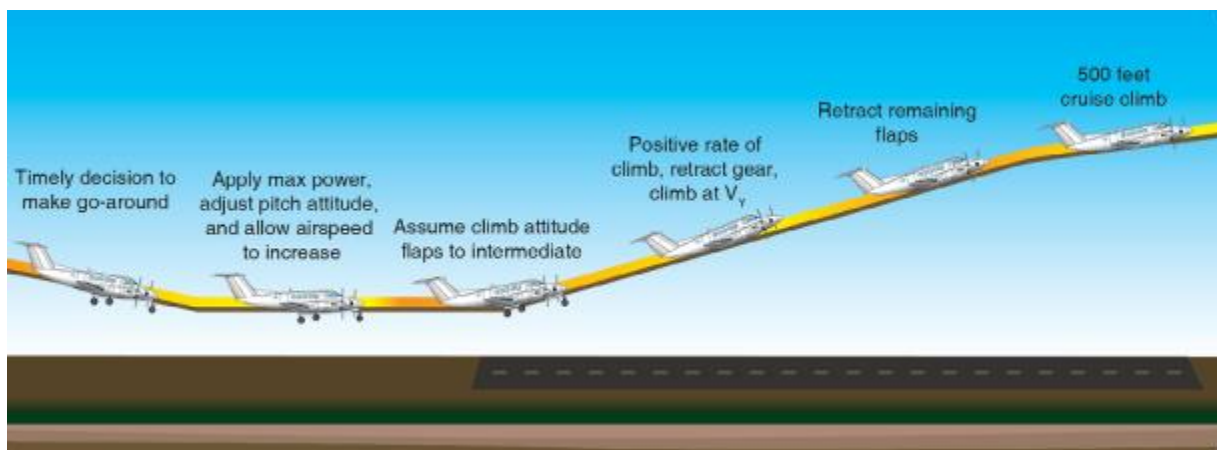

Execution

- Smoothly apply maximum power, level the wings, and transition to a climb pitch attitude that will slow or stop the descent.
- Turn off carburetor heat (Push in) for max RPM
- Retract the flaps to 20°, if fully extended.
- Establish a positive rate of climb, while accelerating to 60 KIAS.
- Wing Flaps - 10° (until obstacles are cleared), then UP (after reaching a safe altitude and 65 KIAS).
- Adjust trim as required.
- Maintain maximum power to a safe maneuvering altitude.

4.11 MANEUVER: Maneuvering In Slow Flight

Objective

The objective of maneuvering in slow flight is to develop the pilot's ability to fly at low speeds and high AOA.

Description

This maneuver demonstrates the flight characteristics and degree of controllability of the airplane in slow flight. During slow flight, any further increase in angle of attack, increase in load factor, or reduction in power, will result in a stall warning (e.g., aircraft buffet, stall horn, etc.)

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Relationship of configuration, weight, Center of Gravity (CG), maneuvering load, bank angle, and power to flight characteristics and controllability.
- Correlation of the maneuver to critical flight situations.
- Compensation for left turning tendencies.
- Region of reverse command/back side of the power curve.



Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

- Gradually reduce the throttle from cruising position
- Add carburetor heat
- While airspeed is decreasing, the position of the nose in relation to the horizon should be noted and raised as necessary to maintain altitude.
- As the airspeed reaches the maximum allowable for flap operation, flaps should be lowered, and the pitch attitude adjusted to maintain altitude.
 - Flap setting as specified by the instructor; extend within flap operating range.
- Apply rudder as necessary to maintain coordinated flight.
- Establish and maintain an airspeed at which any further increase in angle of attack, increase in load factor, or reduction in power, will result in a stall warning (e.g., aircraft buffet, stall horn, etc.),
- Maintain heading and altitude while changing flap configurations.

Recovery

- Increase power to cruise setting.
- Apply forward control pressure to reduce the AOA and maintain altitude
- Maintain coordinated flight, level wings as necessary, and return to the desired flightpath.
- Retract wing flaps to 20°, while accelerating to 60 KIAS.
- After reaching 60 KIAS, retract the wing flaps to up, one increment at a time.
- Adjust pitch and trim as necessary to maintain level flight.
- Return to cruise power setting when the airplane is in normal level flight.

4.12 MANEUVER: Power-Off Stalls – Full or Imminent

Objective

To familiarize the pilot with the conditions that produce power-off stalls, to assist in recognizing an approaching stall, and to develop the habit of taking prompt preventive or corrective action to minimize altitude loss.

Description

Power-off stalls are performed in normal landing configuration to simulate an accidental stall occurring during the approach to landing.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Factors affecting stall speed:
 - Weight
 - Load factor
 - Center of gravity location
 - Configuration
- Stall/Spin awareness considerations:
 - Flight conditions where unintentional stall may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.



Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

The instructor shall specify full or imminent stall, bank angle, and flap setting.

- Carburetor heat on and reduce the throttle to idle.
- After reducing power, maintain a constant altitude in level flight while decelerating to 1.3 V_{so}.
- Pitch the airplane down to establish a normal approach attitude.
- Set flaps - up to full, as specified.
- Establish a stabilized descent while maintaining a specified heading and/or bank angle.
- Establish and maintain a coordinated landing pitch attitude.

Recovery

- Recognize stall indications and recover promptly with a minimum loss of altitude:
 - Reduce the angle of attack by releasing control wheel back pressure.
 - Level the wings.
 - Maintain coordinated flight.
 - Advance the throttle to maximum power.
 - Carburetor heat off (push in) for max RPM
- Retract the flaps to 20°, if fully extended.
- Establish a positive rate of climb, while accelerating to 60 KIAS.
- After reaching 60 KIAS, retract the flaps to up, one setting at a time.
- Return to cruise power setting when the airplane is in normal level flight.

4.13 MANEUVER: Power-On Stalls - Full or Imminent

Objective

To familiarize the pilot with the conditions that produce power-on stalls, to assist in recognizing an approaching stall, and to develop the habit of taking prompt preventive or corrective action to minimize altitude loss.

Description

Power-on stalls are performed in normal takeoff configuration to simulate an accidental stall occurring during takeoffs.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS
- Factors affecting stall speed.
 - Weight
 - Load factor
 - Center of gravity location
 - Configuration
 - Power Setting
- Stall/Spin awareness considerations.
 - Flight conditions where unintentional stalls may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.



Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

The instructor shall specify full or imminent stall, and airplane configuration.

- Maintain a constant altitude in level flight while decelerating to POH computed lift-off speed.
- Set flaps - as specified by instructor.
- Apply full power and establish a normal coordinated climb attitude.
- Smoothly increase the pitch attitude to one that induces a full or imminent stall in straight climbing flight or a climbing turn (maximum bank angle is 20°).

Recovery

- Recognize stall indications and recover promptly with a minimum loss of altitude:
 - Reduce the angle of attack by releasing control wheel back pressure.
 - Level the wings.
 - Maintain coordinated flight.
- When airspeed is above 60 KIAS, retract the flaps in increments to up (0°).
- Return to cruise power setting when the airplane is in normal level flight.

4.14 MANEUVER: Crossed-Control Stalls – Full/Imminent (CFI Applicants Only)

Objective

The objective of the cross-control stall demonstration is to show the effects of uncoordinated flight on stall behavior and to emphasize the importance of maintaining coordinated flight while making turns

Description

This type of stall occurs with the controls “crossed”: aileron pressure applied in one direction and rudder pressure applied in the opposite direction. When excessive control wheel back pressure is applied, a cross-control stall may result.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and CFI PTS.
- Factors affecting stall speed:
 - Weight
 - Load factor
 - Center of gravity location
 - Configuration
 - Power setting
- Entry techniques:
 - Excessive pitch attitude to induce the stall.
 - Failure to recognize first indications of a stall.
 - Recognize difference between imminent/full stalls.
- Stall/Spin awareness consideration:
 - Flight conditions where unintentional stall may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

The instructor shall specify full or imminent stall.

- Set flaps to up.
- Reduce power to idle, maintain altitude, re-trim as airspeed approaches normal glide speed.
- When the glide is established, roll into a medium banked turn to simulate overshooting the centerline of a runway.
- During the turn, excessive rudder pressure should be applied in the direction of the turn, but the bank held constant by applying opposite aileron pressure.
- At the same time, increased control wheel back pressure is required to keep the nose from lowering.
- All these control pressures shall be increased until the airplane stalls.

Recovery

- Recognize stall indications and recover promptly with a minimum loss of altitude:
 - Reduce the angle of attack by releasing control wheel back pressure.
 - Advance the throttle to maximum power.
 - Remove the excessive rudder input, level the wings.
 - Resume coordinated flight.
- Establish a positive rate of climb and accelerate to V_x or V_y , as appropriate.
- Return to cruise power setting when the airplane is in normal level flight.

4.15 MANEUVER: Elevator Trim Stalls – Imminent (CFI Applicants Only)

Objective


To teach the pilot the importance of making smooth power applications, overcoming strong trim forces, maintaining positive control of the airplane to hold safe flight attitudes, and using proper and timely trim techniques.

Description

This type of stall normally occurs during a go-around procedure from a normal landing approach or a simulated forced landing approach, or immediately after a takeoff and positive control of the airplane is not maintained.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and CFI PTS.
- Factors affecting stall speed:
 - Weight
 - Load factor
 - Center of Gravity location
 - Configuration
 - Power Setting
- Entry techniques:
 - Excessive pitch attitude to induce the stall.
 - Failure to recognize first indications of a stall.
 - Recognize difference between imminent/full stalls.
- Stall/Spin awareness consideration:
 - Flight conditions where unintentional stall may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.

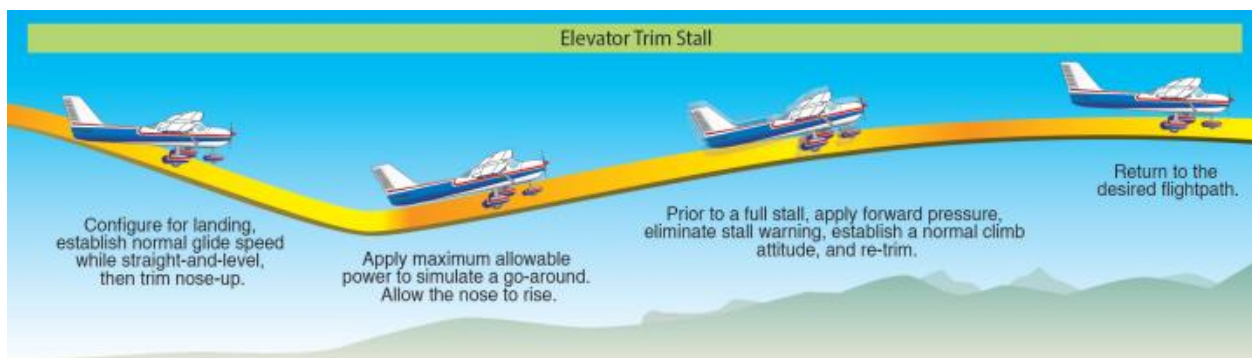

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

- Reduce the throttle slowly.
- Set flaps to Full: once within flap operating range.
- After reducing power, maintain a constant altitude in level flight while decelerating to 1.3 V_{so}.
- Pitch the airplane down to establish normal landing approach glide. Trim aircraft to maintain airspeed.
- Apply full power and establish a pitch up attitude.

Recovery

- Recognize stall indications and recover promptly with a minimum loss of altitude:
 - Reduce the angle of attack by applying forward control wheel pressure.
 - Level the wings.
 - Maintain coordinated flight.
- Re-trim the airplane as necessary to relieve control pressure.
- Retract the flaps to 20°, if fully extended.
- Establish a positive rate of climb, while accelerating to 60 KIAS.
- After reaching 60 KIAS, retract the flaps in increments to up (0°).
- Return to cruise power setting when the airplane is in normal level flight.

4.16 MANEUVER: Secondary Stalls – Imminent (CFI Applicants Only)

Objective


To develop the pilot's awareness of the effect of improper stall recovery techniques and recognition of the approach to a secondary stall.

Description

This type of stall is caused by attempting to hasten the completion of a stall recovery before the airplane has regained sufficient flying speed.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and CFI PTS.
- Factors affecting stall speed:
 - Weight
 - Load factor
 - Center of Gravity location
 - Configuration
 - Power Setting
- Entry techniques:
 - Excessive pitch attitude to induce the stall.
 - Failure to recognize first indications of a stall.
 - Recognize difference between imminent/full stalls.
- Stall/Spin awareness consideration:
 - Flight conditions where unintentional stall may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.

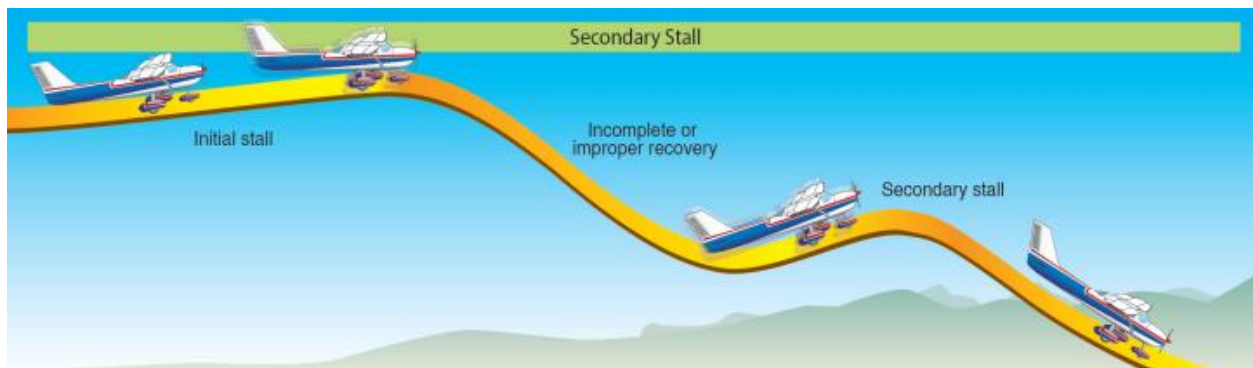

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

- Reduce the throttle to idle.
- After reducing power, maintain a constant altitude in level flight while decelerating to 1.3 V_{so}.
- Pitch the airplane down to establish a normal approach attitude.
- Set flaps up to full, as specified.
- Establish a stabilized descent while maintaining a specified heading and/or bank angle.
- Establish and maintain a coordinated landing pitch attitude.
- As the stall occurs, initiate recovery by applying full power and increasing control wheel back pressure to raise the nose.

Recovery

- Recognize secondary stall indications and recover promptly with a minimum loss of altitude:
 - Reduce the angle of attack by releasing control wheel back pressure.
 - Advance the throttle to maximum power.
 - Level the wings.
 - Maintain coordinated flight.
- Retract the flaps to 20°, if fully extended.
- Establish a positive rate of climb, while accelerating to 60 KIAS.
- After reaching 60 KIAS, retract the flaps in increments to up (0°).
- Return to cruise power setting when the airplane is in normal level flight.

4.17 MANEUVER: Accelerated Stalls – Imminent

Objective

The objective of demonstrating accelerated stalls is to learn how they may occur, to develop the ability to recognize such stalls immediately, and to take prompt and effective recovery actions.

Description

This stall is performed at best glide airspeed. Bank the aircraft to a minimum of 45°. After turn and bank are established, back-elevator pressure should be firmly increased until a definite stall occurs.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and CFI PTS.
- Factors affecting stall speed.
 - Weight
 - Load factor
 - Center of gravity location
 - Configuration
- Entry techniques.
 - Excessive pitch attitude to induce the stall.
 - Failure to recognize indications of a stall.
 - Recognize difference between imminent/full stalls.
- Stall/Spin awareness consideration.
 - Flight conditions where unintentional stall may occur and procedures for recovery.
 - Aerodynamic factors related to spins.
 - Awareness that an aircraft can stall at any airspeed and attitude.

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.

Execution

- Establish and stabilize best glide airspeed while maintaining altitude.
- Set wing flaps to up.
- Enter the maneuver by establishing a bank of approximately 45° while increasing control wheel back pressure to maintain altitude.
- After the turn and bank are established, smoothly, firmly, and progressively increase the angle of attack until a stall occurs.

Recovery

- Recognize imminent stall indications and recover immediately with a minimum loss of altitude:
 - Reduce the angle of attack by releasing control wheel back pressure.
 - Advance the throttle to maximum power.
 - Level the wings.
 - Maintain coordinated flight.
- Establish a positive rate of climb while accelerating to V_x or V_y , as appropriate.
- Return to cruise power setting when the airplane is in normal level flight.

4.18 MANEUVER: Steep Turns

Objective


To develop the pilot's smoothness, coordination, orientation, division of attention, and control techniques while executing maximum performance turns.

Description

The steep turn maneuver consists of a turn in either direction, using a bank angle steep enough to cause an "over banking" tendency during which maximum turning performance is attained and high load factors are imposed.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Overbanking tendencies.
- Load factors caused by steep turns.
- Maneuvering speed in relationship to high load factors.
- Turning performance: radius vs. rate.
- Load factor and stall speed.
- Increase in induced drag requires an increase in power.

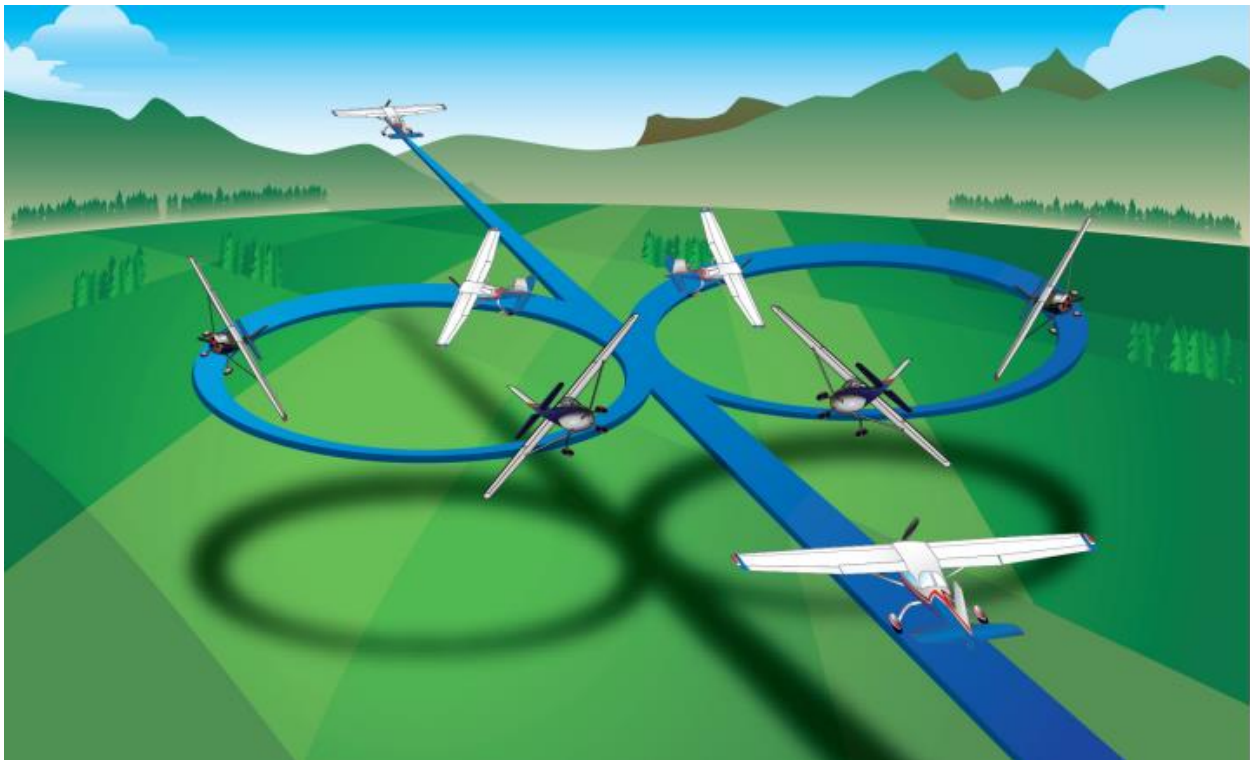

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.
- Adjust power setting to attain an airspeed of 90 KIAS
- NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Smoothly roll into a coordinated bank angle of 45° (private) or 50° (commercial).
- As the turn is being established, control wheel back pressure should be smoothly increased to increase the angle of attack.
- Adjust power to maintain airspeed and pitch to maintain selected altitude.

Recovery

- Rollout on the entry heading by releasing control wheel back pressure, reducing power, and maintaining coordination.
- Return to cruise power setting when the airplane is in normal level flight.

4.19 MANEUVER: Steep Spirals

Objective


To improve pilot techniques for airspeed control, wind drift control, planning, orientation, and division of attention.

Description

A steep spiral is a constant gliding turn, during which a constant radius around a point on the ground is maintained like the maneuver, turns-around-a-point. The radius should be such that the steepest bank shall not exceed 60°.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Suggested radius of turns is 1/4 to 1/3 mile from the reference point.
- Angle of bank shall not exceed 60°.
- Importance of communication if performing maneuver at an airport.
- Importance of monitoring engine temperatures.

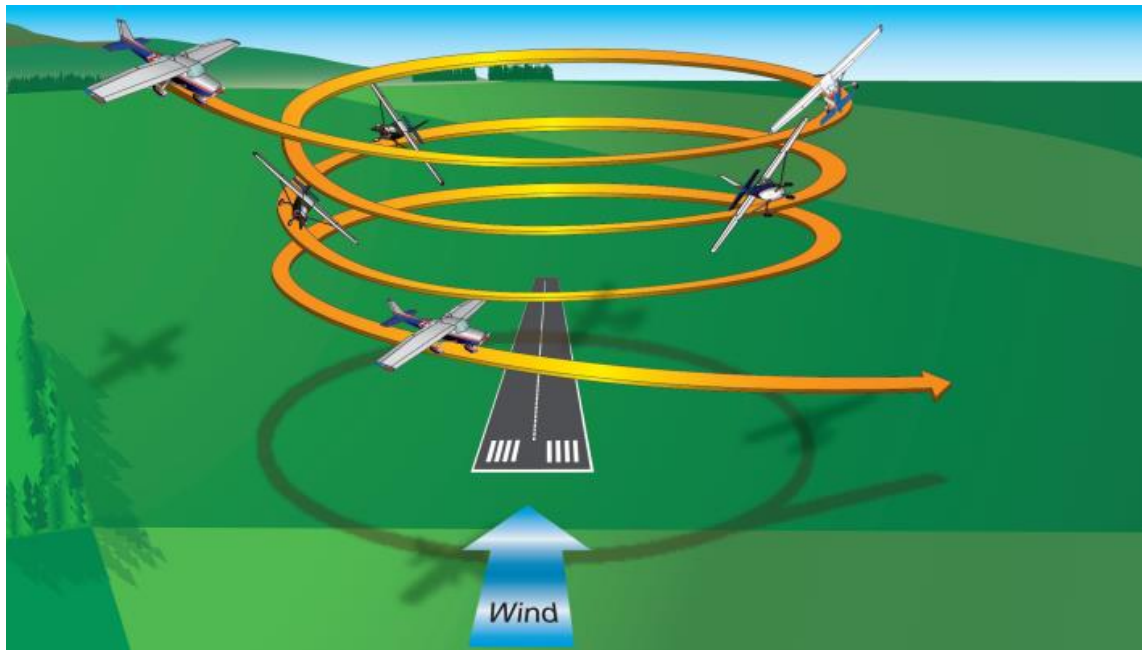

Set-up

- Select an entry altitude that allows three 360° turns with the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA 1,000 feet AGL, unless performing a simulated emergency landing to an approved airport as listed in the Safety Policies and Procedures manual.
- Clear area with two 90° turns.
- Select a suitable ground reference point.

Execution

- Reduce power to idle.
- Establish best glide airspeed.
- A gliding spiral should be started, and a turn of constant radius and airspeed maintained around the selected spot on the ground.
- Correct for wind by using various angles of bank, not to exceed 60°, to maintain the constant radius.
- The engine should be periodically cleared by briefly advancing throttle to normal cruise power, preferably while headed into the wind.

Recovery

- Recover toward a definite object or specific heading which leads into a pattern over an area that could be used for a forced landing.

NOTE: If performed over an approved airport the maneuver can be continued to a 180° Power-Off Accuracy Approach and Landing.

4.20 MANEUVER: Chandelles

Objective


To develop the pilot's coordination, orientation, planning, and accuracy of control during maximum performance flight.

Description

A chandelle is a maximum performance climbing turn beginning from straight-and-level flight and ending at the completion of a precise 180° of turn in a wings-level nose-high attitude at the minimum controllable airspeed.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Effect of airspeed on control effectiveness.

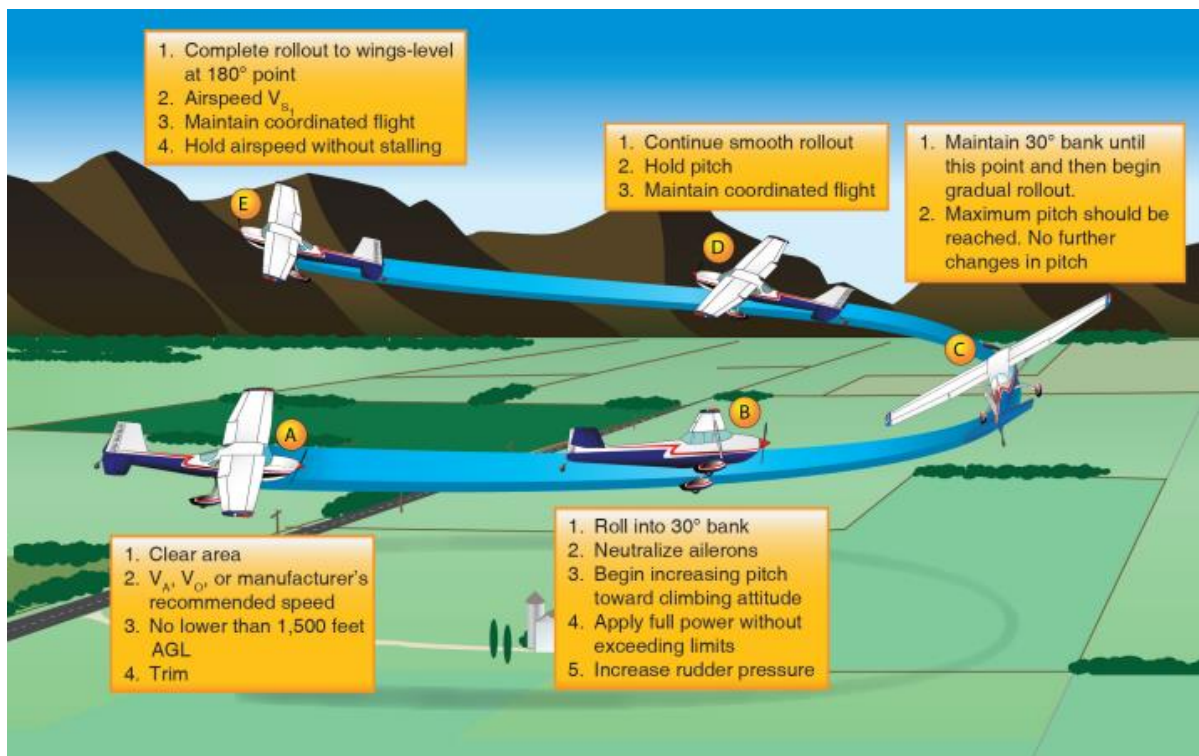

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.
- Adjust power setting to attain V_a .

NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Establish a bank angle of approximately 30°.
- Smoothly apply full power while gradually increasing pitch to maintain a coordinated climbing turn to the 90° point with a constant bank angle.
- Execute a coordinated constant rate rollout from the 90° point to the 180° point, maintaining specified power and a constant pitch attitude.
- Complete rollout at the 180° point, just above stall speed and maintain that airspeed momentarily avoiding a stall.

Recovery

- Resume straight-and-level flight with a minimum loss of altitude.
- Return to cruise power setting when the airplane is in normal level flight.

4.21 MANEUVER: Lazy Eights

Objective


To develop perfect coordination of controls through a wide range of airspeeds and altitudes so that certain accuracy points are reached with planned attitude and airspeed. The maneuver helps develop subconscious feel, planning, orientation, coordination, and speed sense.

Description

Consists of two 180° turns in opposite directions, while making a climb and a descent in a symmetrical pattern during each of the turns.

Teaching Considerations

- Common errors as per the Airplane Flying Handbook and the CFI PTS.
- Effect of airspeed on control effectiveness.

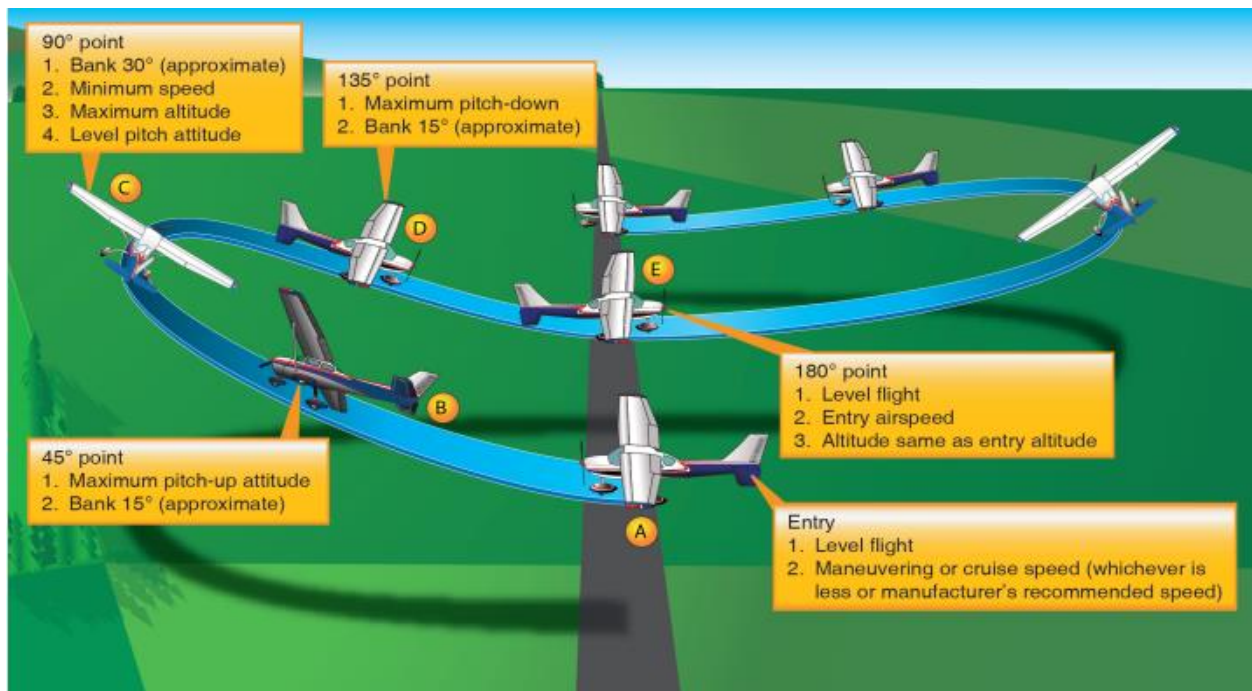

Set-up

- Select an entry altitude that allows the recovery to be completed no lower than the Minimum Recovery Altitude.
 - MRA (Dual) 1,500 feet AGL
 - MRA (Solo) 2,000 feet AGL
- Clear area with two 90° turns.
- Adjust power setting to attain V_a .

NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Enter a coordinated climbing turn in the direction of the 45° reference point, attaining the maximum pitch-up attitude and approximately 15° of bank passing through that point.
- Continue the coordinated turn from the 45° reference point to the 90° reference point, decreasing the pitch attitude while increasing the bank to an angle of approximately 30°.
- Complete 90° of turn with the maximum angle of bank, minimum airspeed (5 to 10 knots above stall speed), maximum altitude and level pitch attitude with the longitudinal axis passing through the reference (horizon) point.
- Continue the coordinated descending turn from the 90° reference point to the 135° reference point, decreasing the pitch attitude to the lowest point and decreasing the bank to approximately 15°.
- Continue the coordinated turn from the 135° reference point to the 180° reference point, increasing the pitch attitude and decreasing angle of bank attaining level flight, original airspeed and altitude passing through the 180° reference point.
- Upon returning to the starting altitude and the 180° point, a climbing turn should be started immediately in the opposite direction toward the selected reference points to complete the second half of the eight in the same manner as the first half.
- Throughout the maneuver, power remains fixed.

Recovery

- Return to cruise power setting when the airplane is in normal level flight.

4.22 MANEUVER: Rectangular Course

Objective


To develop division of attention between the flight path and ground references while controlling the airplane and watching for other aircraft in the vicinity. Another objective is to develop recognition of drift toward or away from a line parallel to the intended ground track.

Description

The rectangular course is a training maneuver in which the ground track of the airplane is equidistant from all sides of a selected rectangular area on the ground.

Teaching Considerations

- Planning and orientation.
 - Noise abatement
 - Obstacle clearance
 - Emergency landing area
 - Configuration and airspeed
 - Selection of a suitable altitude
 - Selection of a suitable reference point and its orientation to the wind
- Faulty technique.
 - Uncoordinated flight controls
- Common errors as per the Airplane Flying Handbook and the CFI PTS.

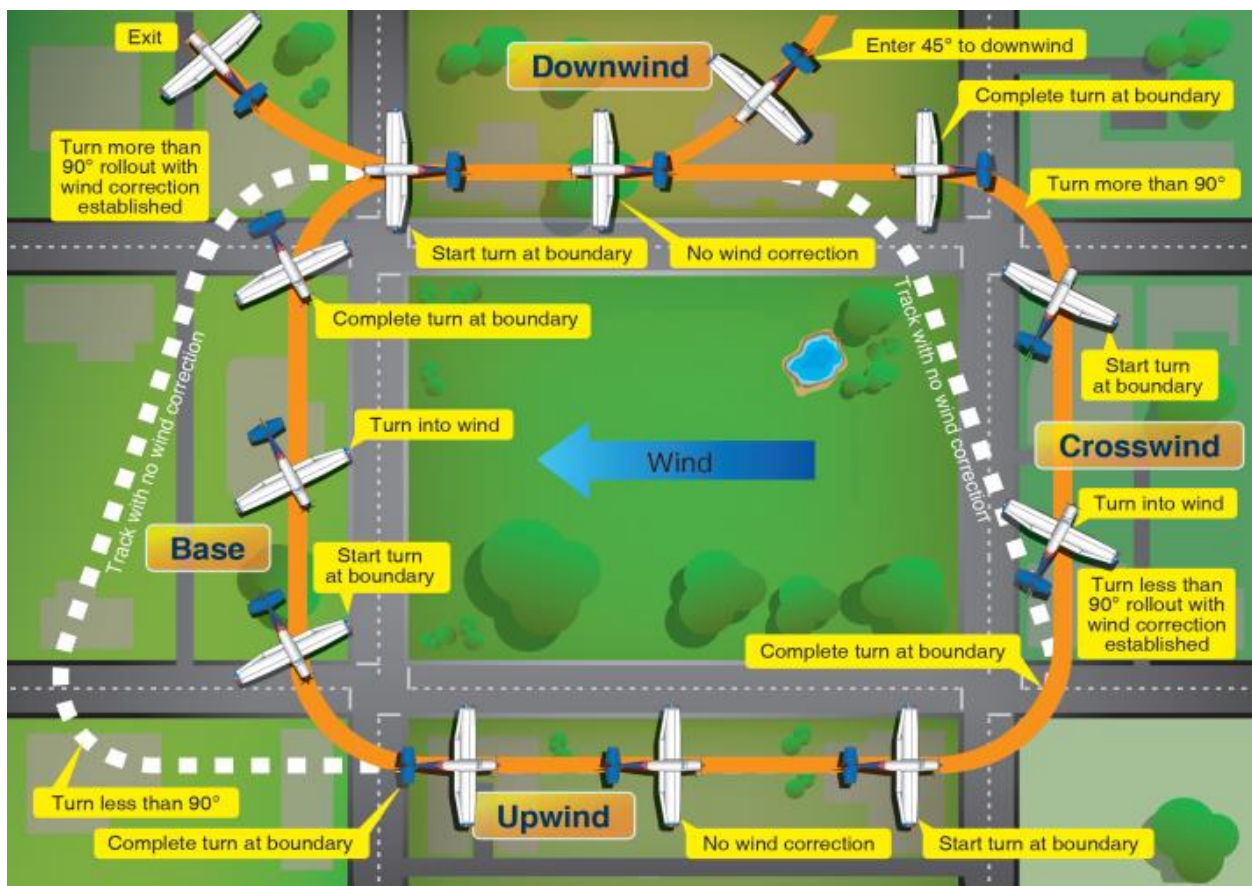

Set-up

- Select a suitable altitude for the maneuver (600 feet - 1,000 feet AGL).
- Clear area with two 90° turns.
- Adjust power setting to attain an airspeed of 90 KIAS
- NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Select a square or rectangular field, whose sides are about a mile long.
- Plan the maneuver to enter a left or right pattern at an appropriate distance (1/4 to 1/2 mile) from the selected reference area, 45° to the downwind leg.
- Maintain a ground track that is equidistant from all sides of the reference area. The airplane should be flown parallel to and at a uniform distance from the field boundaries, not above the boundaries.
- Adjust power to maintain entry airspeed; pitch to maintain selected altitude.

Recovery

- Return to cruise power setting when the airplane is in normal level flight.

4.23 MANEUVER: S-Turns Across a Road

Objective


To develop the ability to compensate for drift during turns, orient the flight path with ground references, follow an assigned ground track, arrive at specified points on assigned headings, and divide the pilot's attention.

Description

The maneuver consists of crossing the road at a 90° angle and immediately beginning a series of 180° turns of uniform radius in opposite directions, re-crossing the road at a 90° angle just as each 180° turn is completed.

Teaching Considerations

- Planning and orientation.
 - Noise abatement
 - Obstacle clearance
 - Emergency landing area
 - Configuration and airspeed
 - Selection of a suitable altitude
 - Selection of a suitable reference point and its orientation to the wind
- Faulty technique.
 - Uncoordinated flight controls
- Common errors as per the Airplane Flying Handbook and the CFI PTS.

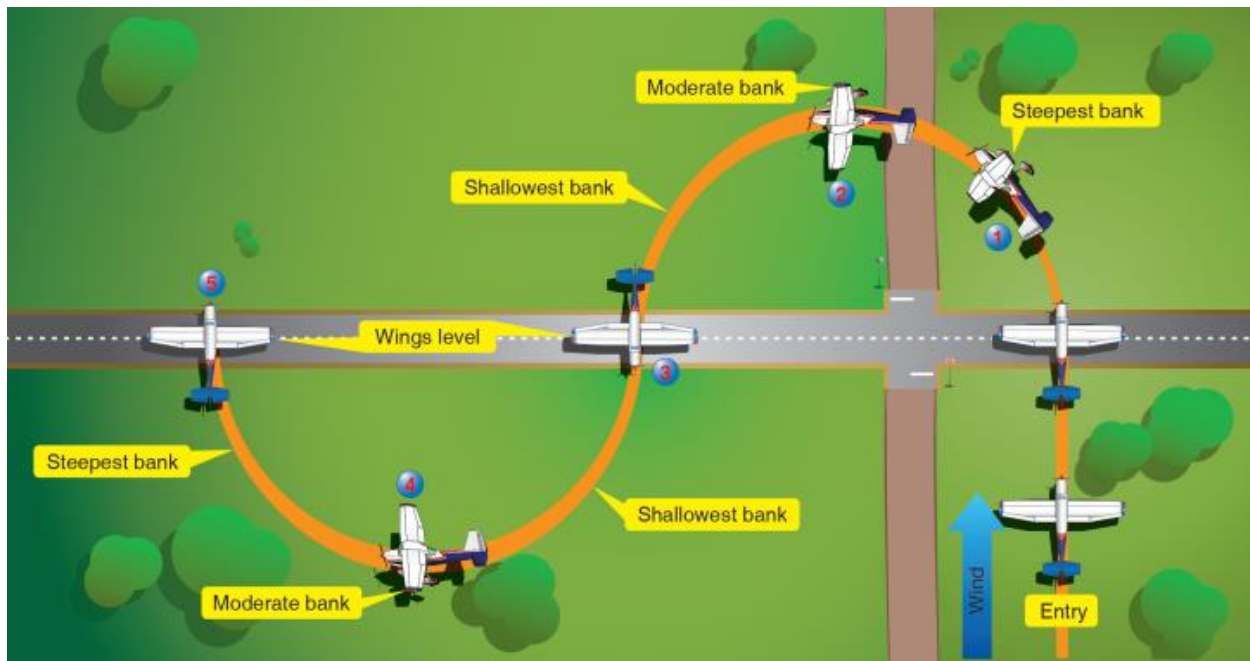

Set-up

- Select a suitable altitude for the maneuver (600 feet –1,000 feet AGL).
- Clear area with two 90° turns.
- Adjust power setting to attain an airspeed of 90 KIAS.

NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Select a suitable ground reference line that lies perpendicular to the wind.
- Enter perpendicular to the selected reference line on a downwind heading.
- Complete a series of 180° turns of uniform radius in opposite directions, re-crossing the reference line at a 90° angle just as each 180° turn is completed.
- Apply the necessary wind-drift correction to track a constant radius turn on each side of the selected reference line.
- To accomplish a constant radius ground track requires a changing roll rate and angle of bank to establish the wind correction angle. Both will increase or decrease as ground speed increases or decreases. Bank angle should not exceed 45°.
- The suggested radius of turns is 1/4 to 1/2 mile from the reference line.
- Adjust power to maintain entry airspeed and pitch to maintain selected altitude.

Recovery

- Return to cruise power setting when the airplane is in normal level flight.

4.24 MANEUVER: Turns-Around-a-Point

Objective


To develop division of attention between the flight path and ground references and recognition of drift towards or away from a prominent ground reference point while maintaining a constant altitude.

Description

This maneuver involves flying the airplane in two or more complete circles of uniform radii or distance from a prominent ground reference point, using a maximum bank of approximately 45° while maintaining a constant altitude.

Teaching Considerations

- Planning and orientation.
 - Noise abatement
 - Obstacle clearance
 - Emergency landing area
 - Configuration and airspeed
 - Selection of a suitable altitude
 - Selection of a suitable reference point and its orientation to the wind
- Faulty technique.
 - Uncoordinated flight controls
- Common errors as per the Airplane Flying Handbook and the CFI PTS.

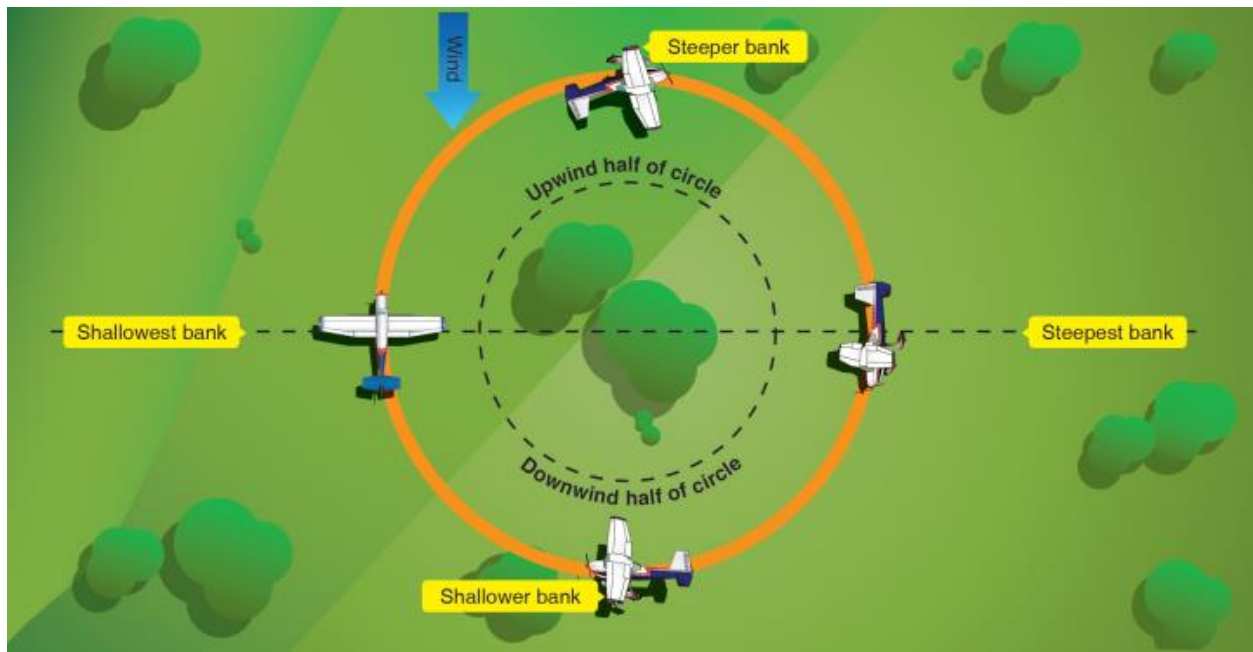

Set-up

- Select a suitable altitude for the maneuver (600 feet – 1,000 feet AGL).
- Clear area with two 90° turns.
- Adjust power setting to attain an airspeed of 90 KIAS.

NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Select a suitable ground reference point.
- Enter the maneuver left or right at a distance equal to the desired radius of the turn on a downwind heading.
- The suggested radius of turns is 1/4 to 1/2 mile from the reference point.
- Maintain proper ground track by correcting for wind.

Recovery

- Return to cruise power setting when the airplane is in normal level flight.

4.25 MANEUVER: Eights on Pylons

Objective


To develop the ability to maneuver the airplane accurately while dividing attention between the flight path and selected pylons on the ground.

Description

Involves flying the airplane in circular paths, alternately left and right, in the form of a figure "8" around two selected pylons on the ground. No attempt is made to maintain a uniform distance from the pylon. The airplane is flown at such an altitude and airspeed that a line parallel to the airplane's lateral axis, and extending from the pilot's eye appears to pivot on each of the pylons.

Teaching Considerations

- Planning and orientation.
 - Noise abatement
 - Obstacle clearance
 - Emergency landing area
 - Configuration and airspeed
 - Selection of a suitable altitude
 - Selection of a suitable reference point and its orientation to the wind
- Faulty technique.
 - Uncoordinated flight controls
 - Use of rudder to maintain position on the pylon
- Common errors as per the Airplane Flying Handbook and the CFI PTS.

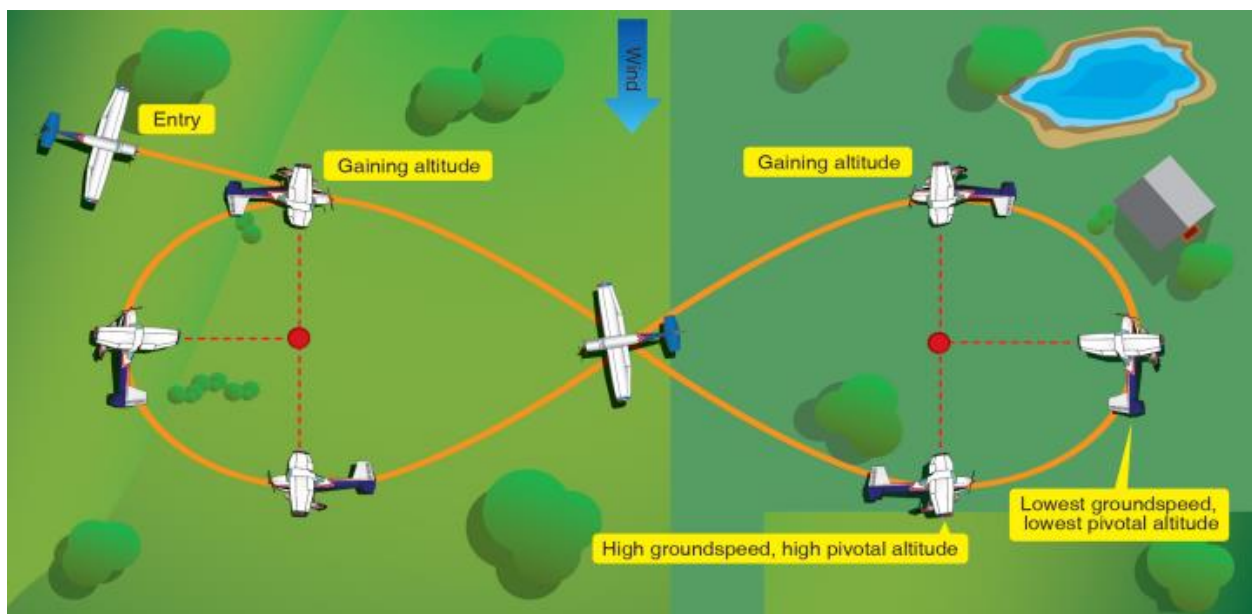

Set-up

- Select a suitable altitude for the maneuver.
- Clear area with two 90° turns.
- Adjust power setting to attain an airspeed of 90 KIAS.

NOTE: Pivotal Altitude should be calculated during preflight, $(GS \text{ KIAS})^2 / 11.3 + \text{Field Elevation} = PA$

NOTE: During operations at density altitudes which lower the aircraft's performance capability, a lower speed may be used.

Execution

- Select two points on the ground along a line which lies 90° perpendicular to the direction of the wind.
- Enter the maneuver by flying diagonally crosswind between the pylons to a point downwind from the first pylon so that the first turn can be made into the wind.
- As the airplane approaches a position where the pylon is just ahead of the wingtip, the turn should be started by lowering the upwind wing to place the pilot's line of sight reference on the pylon.
- Adjust pivotal altitude as required to maintain the pilot's reference line on the pylon. As the airplane heads into the wind, a descent must be made to hold the reference line on the pylon.
- No correction should be made to counteract drifting during the turns.
- As the airplane turns downwind the rollout should be started to allow the airplane to proceed diagonally to a point on the downwind side of the second pylon. The rollout must be completed in the proper wind correction angle to correct for wind drift, so that the airplane will arrive at a point downwind from the second pylon the same distance it was from the first pylon.
- Start a turn in the opposite direction by lowering the upwind wing to again place the pilot's line of sight reference on the second pylon. The turn is then continued just as in the turn around the first pylon but in the opposite direction.
- Throughout the maneuver power remains fixed.

Recovery

- Return to cruise power setting when the airplane is in normal level flight.

4.26 MANEUVER: Pilotage and Dead Reckoning

Objective

To develop the pilot's ability to navigate on cross-country flights by reference to landmarks and computations.

Description

Picking suitable landmarks and making computations based on airspeed, course, and heading to determine the position of the airplane.

Teaching Considerations

- Select prominent landmarks that can be readily identified.
- Use of checkpoints.
- Definitions for obtaining flight information.
- Use of E6B to calculate ground speed, ETA, and fuel burn.

Execution

- Follow a preplanned course by reference to landmarks.
- Identify landmarks by relating surface features to chart symbols.
- Navigate by means of pre-computed headings, ground speeds, and elapsed time.
- Correct and record the differences between preflight ground speed and heading calculations, and those determined enroute.

4.27 MANEUVER: Radio Navigation and Radar Services

Objective

To develop the pilot's ability to use radio navigation and radar services.

Teaching Considerations

- VHF Omnidirectional Range (VOR).
- Area Navigation (GPS/RNAV).
- Transponder (Mode C/Mode S).
- Avionics manuals.

Execution

- Demonstrate the ability to use an airborne electronic navigation system.
- Locate the airplane's position using the navigation system.
- Intercept and track a given course, radial or bearing, as appropriate.
- Recognize and describe the indication of station passage if appropriate.
- Recognize signal loss and take appropriate action.
- Use proper communication procedures when utilizing radar services.

4.28 MANEUVER: Diversion

Objective

To develop the ability to orient oneself with a chart and make rapid and reasonably accurate computations of headings and arrival time estimates.

Teaching Considerations

- Timely and appropriate selection of diversion destination.
- Accurate calculation of heading, ground speed, arrival time, and fuel consumption.
- In-flight communications with ATC and FSS.

Execution

- Select appropriate alternate airport and route.
- Make an estimate of heading, ground speed, arrival time, and fuel consumption to the alternate airport.
- Check NOTAMS and weather conditions.
- Change flight plan with FSS.

4.29 MANEUVER: Lost Procedure

Objective

To develop the pilot's ability to make sound decisions based on pilotage, dead reckoning, and radio navigation to assist in locating the aircraft's position.

Teaching Considerations

- Situational awareness.
- The 5 C's:
 - Confess to yourself that you are lost.
 - Climb to a more suitable altitude.
 - Communicate with the necessary ATC facility.
 - Conserve fuel.
 - Circle to maintain position.

Execution

- Select an appropriate course of action.
- Maintains an appropriate heading and climbs, if necessary.
- Identify prominent landmarks.
- Use navigation systems/facilities and or contact an ATC facility for assistance, as appropriate.

5. ABNORMAL / EMERGENCY PROCEDURES

Objective

To develop the pilot's knowledge of the elements related to emergencies, abnormal procedures, system, and equipment malfunctions appropriate to the Cessna 162. The pilot should be able to analyze various situations and take appropriate action for simulated emergencies and malfunctions which they may encounter.

Description

This chapter outlines and explains in detail the various emergencies, abnormal procedures, system, and equipment malfunctions appropriate to the Cessna 162.

Checklist Usage

- There are two checklists for the aircraft: a laminated Quick Reference checklist and a manufacturer's checklist containing amplified procedures.
- The boxed Emergency Procedures items in Quick Reference checklist and the bold items in the manufacturer's checklist are to be committed to memory. However, once the items have been completed, the checklist should be referenced to ensure proper completion.
- Some procedures in the Quick Reference checklist may continue with amplified procedures in the manufacturer's checklist and shall be referenced as directed, provided time and altitude permit.

Suitable Landing Areas

Certain checklist procedures direct the pilot to divert to another airport. In these cases, the checklist will state 'Nearest Suitable Airport' or 'Land As Soon As Possible'. The pilot must exercise good judgment in these situations considering external factors such as terrain, airspace, weather, personal limitations, etc. The intent of these terms is:

Nearest Suitable Airport – An airport within reasonable distance and adequate facilities to complete repairs. Preferably one with a Cessna Service Center that has adequate inventory and expertise.

Land As Soon As Possible – Nearest suitable landing area, preferably an airport, but possibly a road, field or lake of adequate length and without obstructions permitting a normal approach and safe landing.

References

Airplane Flying Handbook
Cessna Model 162 Pilot's Operating Handbook
Cessna 162 Checklist – Emergency Procedures

5.1 Emergency Approach and Landing

Objective

The objective of a simulated emergency landing is to develop the pilot's accuracy, judgment, planning, procedures, and confidence when little or no power is available.

Description

The airplane is flown from the point of simulated engine failure to where a safe landing could be made utilizing proper emergency cockpit procedures.

Teaching Considerations

- Stall and spin awareness.
- Best glide and configuration.
- Selecting a suitable landing area.
- Establishing a stabilized approach.
- The use and completion of appropriate Emergency Checklists.
- Wind effect on glide distance.
- Assessing priorities and division of attention.
- Common errors as per the Airplane Flying Handbook and the CFI PTS.

Set-up

- Establish and maintain best glide airspeed, with the appropriate configuration for the simulated emergency.
- Trim the airplane to maintain best glide airspeed.
- Select a suitable landing area within gliding distance.

Execution

- Plan and follow a flight pattern to the selected landing area while considering altitude, wind, terrain, obstructions, and other factors.
- Plan the approach to arrive at the downwind position abeam the selected landing area at 1,000 feet AGL.
- Follow the appropriate Emergency Checklist & Memory Items.
- Maintain positive control of the airplane.
- Fly the approach as close to a normal power-off 180° approach as possible.

Recovery

- Conduct a normal go-around procedure.
- Recoveries must be made no lower than 1,000 feet AGL unless a stabilized approach and landing can be made at an approved airport.
- Approach and landings at an approved airport during this maneuver can only be attempted on dual flights.

5.2 EMERGENCY PROCEDURE: Engine Failure - During Takeoff Roll

Indications/Recognition

A loss of power, annunciator illumination, or any abnormality before rotation constitutes a reason for a rejected Takeoff.

Teaching Considerations

- If simulating this emergency, it must be performed within the first 1/3 of the runway.

Execution

- 1. Throttle Control - IDLE (pull full out)**
- 2. Brakes - APPLY**
3. Wing Flaps - RETRACT
4. Mixture Control - IDLE CUTOFF (pull full out)
5. MAGNETOS Switch – OFF
6. MASTER Switch (ALT and BAT) – OFF

5.3 EMERGENCY PROCEDURE: Engine Failure - Immediately After Takeoff

Indications/Recognition

A loss of power, annunciator illumination, or any abnormality after rotation constitutes an engine failure immediately after takeoff.

Teaching Considerations

- Stall/spin awareness.
- Selecting a safe landing site.
- The use and completion of appropriate Emergency Checklists.

Execution

- 1. Airspeed -**
 - a. 70 KIAS - Flaps UP**
 - b. 65 KIAS - Flaps 10° - FULL**
2. Mixture Control - IDLE CUTOFF (pull full out)
3. FUEL SHUTOFF Valve - OFF (pull full out)
4. MAGNETOS Switch - OFF
5. Wing Flaps - AS REQUIRED (FULL recommended)
6. MASTER Switch (ALT and BAT) - OFF
7. LAND – STRAIT AHEAD
8. Cabin Door – UNLATCH (BOTH)
 - a. UNLATCH (Secondary)
 - b. UNLATCH & OPEN (Primary latch and open just prior to touchdown)

5.4 EMERGENCY PROCEDURE: Engine Failure – In Flight

Indications/Recognition

A loss of power, engine roughness, and/or abnormal engine instrument readings could lead to an engine failure in cruise flight.

Teaching Considerations

- If the engine failure was caused by water in the fuel, it will take a brief period of time to be used up. Fuel flow pressure indications will be normal.
- Maintain positive aircraft control and situational awareness throughout the emergency.
- The use and completion of appropriate Emergency Checklists.

Execution

1. **Airspeed - 70 KIAS (best glide speed)**
2. **THROTTLE Control – IDLE (pull full out)**
3. **CARB HEAT Control Knob – ON (pull full out)**
4. **FUEL SHUTOFF Valve - ON (push full in)**
5. **Mixture Control - RICH (if restart has not occurred)**
6. **MAGNETOS Switch - BOTH (or START if propeller is stopped)**

NOTE: If the propeller is windmilling, engine will restart automatically within a few seconds. If propeller has stopped (possible at low speeds), turn MAGNETOS switch to START, advance throttle slowly from idle and lean the mixture from full rich as required to obtain smooth operation.

7. **FUEL PUMP Switch - OFF**

NOTE: If the indicated fuel flow (FFLOW GPH) immediately drops to zero, a sign of failure of the engine-driven fuel pump, return the FUEL PUMP switch to the ON position

5.5 EMERGENCY PROCEDURE: Emergency Landing Without Engine Power

Objective

This procedure is appropriate if power is not restored after an engine failure in-flight.

Teaching Considerations

- Undershooting and overshooting the selected emergency landing area.
- Plan the approach to arrive at the downwind position abeam the selected landing area at 1,000 feet AGL.
- The use and completion of appropriate Emergency Checklists.

Execution

- 1. Seats and Seat Belts - SECURE**
- 2. Airspeed - 70 KIAS - Flaps UP**
65 KIAS - Flaps 10° - FULL
- 3. Mixture Control - IDLE CUTOFF (pull full out)**
- 4. FUEL SHUTOFF Valve - OFF (pull full out)**
5. Radio - ALERT ATC or TRANSMIT MAYDAY ON 121.5 MHZ, (give location, intentions and SQUAWK 7700)
6. MAGNETOS Switch - OFF
7. Wing Flaps - AS REQUIRED (FULL recommended)
8. MASTER Switch (ALT and BAT) - OFF (when landing is assured)
9. ELT - ACTIVATE
10. Doors - UNLATCH (Primary & Secondary) & OPEN JUST PRIOR TO TOUCHDOWN
11. Touchdown - SLIGHTLY TAIL LOW
12. Brakes - APPLY HEAVILY

5.6 EMERGENCY PROCEDURE: Precautionary Landing with Engine Power

Objective

This procedure is appropriate when landing off airport, with the engine still producing power.

Teaching Considerations

- Understanding when a precautionary landing may be necessary.
- Stall and spin awareness.
- Selecting a suitable landing area.
- Establishing a stabilized approach.
- The use and completion of appropriate Emergency Checklists.
- Assessing priorities and division of attention.

Execution

1. Seats and Seat Belts - SECURE
2. Airspeed - 70 KIAS
3. Wing Flaps – 10 or 25°
4. Radio - ALERT ATC or TRANSMIT MAYDAY ON 121.5 MHZ, (give location, intentions and SQUAWK 7700)
5. Selected Field - FLY OVER (noting terrain and obstructions)
6. Wing Flaps - FULL (on final approach)
7. Airspeed - 60 KIAS
8. MASTER Switch (ALT and BAT) - OFF (when landing assured)
9. ELT - ACTIVATE
10. Doors - UNLATCH (Primary & Secondary) & OPEN JUST PRIOR TO TOUCHDOWN
11. Touchdown - SLIGHTLY TAIL LOW
12. Mixture Control - IDLE CUTOFF (pull full out)
13. MAGNETOS Switch – OFF
14. Brakes - APPLY HEAVILY

5.7 EMERGENCY PROCEDURE: Ditching

Objective

This procedure is appropriate if an emergency water landing is necessary.

Teaching Considerations

- Use of personal flotation devices and life rafts.
- Emergency egress procedures in case the aircraft capsizes inverted.
- The necessity of touching down at the established rate of descent and not in a landing flare.

Execution

1. Radio - TRANSMIT MAYDAY on 121.5 MHz, (give location, intentions, and SQUAWK 7700)
2. Heavy Objects (in baggage area) - SECURE OR JETTISON (if possible)
3. Seats and Seat Belts - SECURE
4. Wing Flaps - 25° - FULL
5. Power - ESTABLISH 300 FT/MIN DESCENT AT 60 KIAS

NOTE: If no power is available, approach at 70 KIAS with Flaps UP or at 65 KIAS with Flaps 10°.

6. Approach - High Winds, Heavy Seas - INTO THE WIND
Light Winds, Heavy Swells - PARALLEL TO SWELLS
7. ELT - ACTIVATE
8. Cabin Doors – UNLATCH SECONDARY, UNLATCH/OPEN PRIMARY BEFORE TOUCHDOWN
9. Touchdown - LEVEL ATTITUDE AT ESTABLISHED 300 FT/MIN RATE OF DESCENT
10. Face - CUSHION AT TOUCHDOWN (with folded coat)
11. Airplane - EVACUATE THROUGH CABIN DOORS

NOTE: If necessary, open window and flood cabin to equalize pressure so doors can be opened.

12. Life Vests and Raft - INFLATE WHEN CLEAR OF AIRPLANE

5.8 EMERGENCY PROCEDURE: Engine Fire – During Start on Ground

Indications/Recognition

- Flames and smoke coming from the engine cowl.
- Heat and the smell of smoke in the cockpit.

Teaching Considerations

- Proper priming technique.
- Proper starting technique.
- Determining electrical vs. engine fire.

Execution

- 1. MAGNETOS Switch - START (continue cranking to start the engine)**

IF ENGINE STARTS

2. Power - 1800 RPM (for a few minutes)
3. Engine - SHUTDOWN (inspect for damage)

IF ENGINE FAILS TO START

- 2. Throttle Control - FULL (push full in)**
- 3. Mixture Control - IDLE CUTOFF (pull full out)**
- 4. MAGNETOS Switch - START (continue cranking)**
- 5. FUEL SHUTOFF Valve - OFF (pull full out)**
- 6. MAGNETOS Switch - OFF**
- 7. MASTER Switch (ALT and BAT) - OFF**
8. Engine - SECURE
9. Parking Brake - RELEASE
10. Fire Extinguisher - OBTAIN (have ground attendants obtain if not installed)
11. Airplane - EVACUATE
12. Fire - EXTINGUISH (using fire extinguisher, wool blanket, or dirt)
13. Fire Damage - INSPECT (repair or replace damaged components and/or wiring before conducting another flight)

5.9 EMERGENCY PROCEDURE: Engine Fire – In Flight

Indications/Recognition

- Flames and smoke coming from the engine cowl.
- Heat and the smell of smoke in the cockpit.

Teaching Considerations

- Procedures for extinguishing a fire during flight.
- Location of nearest suitable airport/emergency landing location.
- Determining electrical vs. engine fire.

Execution

- 1. Mixture Control - IDLE CUTOFF (pull full out)**
- 2. FUEL SHUTOFF Valve - OFF (pull full out)**
- 3. MASTER Switch (ALT and BAT) - OFF**
4. Cabin Vents - OPEN (as needed)
5. CABIN HT and CABIN AIR Control Knobs - OFF (push full in) (to avoid drafts)
6. Airspeed – 85 KIAS (If fire is not extinguished, increase glide speed to find an airspeed, within airspeed limitations, which will provide an incombustible mixture)
7. Forced Landing - EXECUTE (refer to EMERGENCY LANDING WITHOUT ENGINE POWER)

5.10 EMERGENCY PROCEDURE: Electrical OR Cabin Fire - In Flight

Indications/Recognition

- Flames or smoke from inside the cabin with smell of burning wire insulation.

Teaching Considerations

- Determining electrical vs. engine fire.
- Use of fire extinguisher inflight (Halon).

Execution

1. **MASTER Switch (ALT and BAT) - OFF**
2. **Cabin Vents - CLOSED (to avoid drafts)**
3. **CABIN HT and CABIN AIR Control Knobs - OFF (push full in) (to avoid drafts)**
4. **Fire Extinguisher - ACTIVATE (if available)**
5. AVIONICS Switch - OFF
6. All Other Switches (except MAGNETOS switch) – OFF

IF FIRE HAS NOT BEEN EXTINGUISHED

7. **MASTER Switch (ALT and BAT) - ON**
8. **Rapid Descent - EXECUTE (Perform sideslip to rapidly lose altitude and shorten exposure time).**
9. AVN MASTER Switch - ON
10. Radio - ALERT ATC or TRANSMIT MAYDAY ON 121.5 MHZ, (give location, intentions and SQUAWK 7700)
11. Forced Landing - EXECUTE (refer to PRECAUTIONARY LANDING WITH ENGINE POWER)

NOTE: The G300 self-test and ADAHRS alignment may take several minutes to establish thus delaying display of flight. instrument data. It may be necessary to execute landing without airspeed or altitude information.

IF FIRE HAS BEEN EXTINGUISHED AND ELECTRICAL POWER IS NECESSARY FOR CONTINUED FLIGHT TO NEAREST SUITABLE AIRPORT OR LANDING AREA

WARNING: AFTER THE FIRE EXTINGUISHER HAS BEEN USED, MAKE SURE THAT THE FIRE IS EXTINGUISHED BEFORE EXTERIOR AIR IS USED TO REMOVE SMOKE FROM THE CABIN.

7. Cabin Vents - OPEN (when sure that fire is completely extinguished)
8. CABIN HEAT Control Knob - ON (pull full out) (when sure that fire is completely extinguished)
9. Circuit Breakers - CHECK (for OPEN circuit(s), do not reset)
10. MASTER Switch (ALT and BAT) - ON
11. AVN MASTER Switch - ON
12. Land the airplane as soon as possible to inspect for damage

5.11 EMERGENCY PROCEDURE: Wing Fire

Indications/Recognition

- Flames and/or smoke coming from the wing.

Teaching Considerations

- Procedures for extinguishing a fire during flight.
- Location of the nearest suitable airport/emergency landing location.

Execution

- 1. LAND and TAXI Light Switches - OFF**
- 2. NAV Light Switch - OFF**
- 3. STROBE Light Switch - OFF**

NOTE: Perform a sideslip to keep the flames away from the fuel tank and cabin. Land as soon as possible using flaps only as required for final approach and touchdown

4. Land as soon as possible.

5.12 EMERGENCY PROCEDURE: Inadvertent Icing Encounter During Flight

Indications/Recognition

- Visible ice around windshield, leading edges or wing struts.

Teaching Considerations

- Importance of recognizing and taking immediate action to exit icing conditions.
- Effects of icing on aircraft aerodynamics and engine performance.

Execution

1. **Turn back or change altitude (to obtain an outside air temperature that is less conducive to icing)**
2. **CABIN HT Control Knob - ON (pull full out)**
3. Watch for signs of induction air filter icing and apply carburetor heat as required. Monitoring the G300 Carb °F Indicator may assist early detection. A loss of engine RPM could be caused by carburetor ice or ice blocking the air intake filter. Adjust the throttle as necessary to hold engine RPM. Adjust mixture as necessary for any change in power settings or if carburetor heat is used continuously.
4. Watch for ice accretion on pitot tube and signs of pitot-static icing. Airspeed and altimeter indications may become unreliable.
 - a. Attitude and Heading information will remain reliable in event of airspeed and altimeter failure. Use attitude indicator to monitor pitch and bank.
 - b. Reference GS (ground speed) in conjunction with GPS derived wind information to determine an approximate airspeed.
 - c. Reference GPS ALTITUDE on MFD INFO page (if installed) or select G300 TERRAIN Profile page. GPS Altitude is provided by the white arrowhead on the left side of the TERRAIN Profile display.
 - d. Navigate using Heading Strip, Lateral Deviation, and GPS moving map (GPS moving map and TERRAIN Profile cannot be displayed at the same time).

NOTE: GPS information is not as accurate as barometric data but will provide an approximate value for comparison to pitot static instruments or a back-up if barometric instruments become unreliable.

5. Plan a landing at the nearest airport. With an extremely rapid ice build-up, select a suitable off airport landing site.
6. With an ice accumulation of 0.25 inch (6.35 mm) or more on the wing leading edges, be prepared for significantly higher power requirements, higher approach and stall speeds, and a longer landing roll. Gently pitch and yaw the airplane periodically to keep ice bridging on the controls to a minimum.
7. Leave wing flaps retracted. With a severe ice build-up on the horizontal tail, the change in wing wake airflow direction caused by wing flap extension could result in a loss of elevator effectiveness.
8. Perform a landing approach using a forward slip, if necessary, for improved visibility.
9. Approach at 65 to 70 KIAS (estimated 70 KTS if using GPS for airspeed indication) depending upon the amount of ice accumulation.
10. Perform landing in level attitude.
11. Go arounds should be avoided whenever possible because of severely reduced climb capability.

5.13 EMERGENCY PROCEDURE: Landing with a Flat Main Tire

Indications/Recognition

- Main tire appears deflated or shredded.

Teaching Considerations

- Importance of maintaining directional control.

Execution

1. Approach - NORMAL
2. Wing Flaps - FULL
3. Touchdown - GOOD MAIN TIRE FIRST (hold airplane off flat tire as long as possible with aileron control)
4. Directional Control - MAINTAIN (using brake on good wheel as required)

5.14 EMERGENCY PROCEDURE: Landing with a Flat Nose Tire

Indications/Recognition

- Nose tire appears deflated or shredded.

Teaching Considerations

- Importance of protecting propeller from ground contact.

Execution

1. Approach - NORMAL
2. Wing Flaps - AS REQUIRED
65 to 70 KIAS - Flaps UP - 10°
Below 65 KIAS - Flaps 10° - FULL
3. Touchdown - ON MAINS (hold nosewheel off the ground as long as possible)
4. Elevator - continue stick to full aft as airplane slows (hold nosewheel off the ground as long as possible)
5. When nosewheel touches down, maintain full up elevator as airplane slows to stop.
6. Directional Control - MAINTAIN (using full rudder control) Attempt to limit differential braking.
7. Braking - Use brakes only as needed to lessen chance of prop strike. Rolling drag of the flat nose tire will increase braking effect.

5.15 EMERGENCY PROCEDURE: Over Voltage

Indications/Recognition

- High volts annunciator comes on or M BATT Amps more than 40

Teaching Considerations

- Importance of a proper instrument scan, including engine gauges.
- Possible outcomes of uncorrected over voltage situations.

Execution

1. MASTER Switch (ALT Only) - OFF
2. Electrical Load - REDUCE IMMEDIATELY as follows:
 - a. LAND Light Switch - OFF (use as required for landing)
 - b. NAV Light Switch - OFF
 - c. STROBE Light Switch - OFF
 - d. AVIONICS Switch - OFF

NOTE: Radio, Transponder, Pitch Trim, and options (MFD, Autopilot, and PS Intercom), if installed, will be inoperative with AVN MASTER Switch in the OFF position. Land as soon as practical.

3. Land as soon as practical

5.16 EMERGENCY PROCEDURE: Low Voltage

Indications/Recognition

- Low Volts annunciator comes on or does not go out at higher RPM.

Teaching Considerations

- Importance of a proper instrument scan, including engine gauges.
- Possible outcomes of uncorrected low voltage situations.

Execution

NOTE: Volts indication below the green band range or less than 12.5 volts may occur during low RPM conditions with an electrical load on the system such as during a low RPM taxi. Under these conditions, the volts indication will increase into the green band range (12.5 - 15.0 volts) at higher RPM. The master switch need not be recycled since an overvoltage condition has not occurred to deactivate the alternator system.

1. AVN MASTER Switch – OFF

NOTE Radio, Transponder, Pitch Trim, and options (MFD, Autopilot, and PS Intercom), if installed, will be inoperative with AVN MASTER Switch in the OFF position.

2. START/ALT Circuit Breaker - CHECK IN (if open, reset (close) circuit breaker. If circuit breaker opens again, do not reset)
3. MASTER Switch (ALT Only) – OFF
4. MASTER Switch (ALT Only) – ON
5. MAIN CB RESET Switch - PRESS MOMENTARILY
6. VOLTS - CHECK 13.5 Volts (minimum)
7. AMPS - CHECK CHARGING (positive)
8. AVN MASTER Switch - ON (only if VOLTS are 12.5 and AMPS are charging)

IF LOW VOLTS ANNUNCIATOR REMAINS ON

9. MASTER Switch (ALT Only) - OFF
10. Electrical Load - REDUCE IMMEDIATELY as follows:
 - a. LND Light Switch - OFF
 - b. NAV Light Switch - OFF
 - c. STROBE Light Switch - OFF
 - d. AVIONICS Switch (BUS 1) - OFF

NOTE: Radio, Transponder, Pitch Trim, and options (MFD, Autopilot, and PS Intercom), if installed, will be inoperative with AVN MASTER Switch in the OFF position.

11. Land as soon as practical.

5.17 EMERGENCY PROCEDURE: ADC & ADAHRS Failure

Indications/Recognition

- RED X on airspeed and/or altitude indicators.

Teaching Considerations

- Proper systems knowledge to troubleshoot extent of problem.
- Importance of maintaining partial panel proficiency.

Execution

RED X - PFD AIRSPEED INDICATOR

1. ADAHRS Circuit Breaker - CHECK IN
 - a. If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
 - b. If closed, pull (open) ADAHRS Circuit Breaker, and pull (open) SEC PWR Circuit Breaker (overhead Panel Light will go off) then reset (close) both circuit breakers.
2. Affected Indicator (other than EIS) - RED-X STILL DISPLAYED
 - a. Reference GS (ground speed) in conjunction with GPS derived wind information to determine an approximate airspeed.
 - b. Select COMPASS ARC from G300 MAP SET-UP for approximate GPS derived heading information or monitor magnetic compass (if installed).
 - c. Reference GPS ALTITUDE on TERRAIN PROFILE page (GPS altitude is the white arrowhead on left side) or MFD INFO page (if installed) for approximate altitude.
 - d. Navigate using pilotage and GPS moving map if available.
 - e. Land as soon as possible.
3. EIS Engine Indicating System - RED-X STILL DISPLAYED
 - a. If only the EIS is RED X (no other PFD or MFD RED X is present), continue monitoring. Non-emergency full throttle operation should be limited to prevent engine overspeed or exceeding temperatures. Descents should be made at idle with carburetor heat applied.
 - b. Land as soon as possible.
4. Affected Indicator - RED-X HAS CLEARED (indicator normal)
5. Land as soon as practical.

5.18 EMERGENCY PROCEDURE: Electric Trim Failure

Indications/Recognition

- AP or PTRM annunciator(s) come on.
- Uncommanded or unresponsive to control inputs.

Teaching Considerations

- Proper systems knowledge to troubleshoot extent of problem.
- Various ways of disconnecting autopilot/trim system.

Execution

1. AVN MASTER Switch - VERIFY ON
2. TRIM/AP Circuit Breaker - CHECK IN
 - a. If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
 - b. If closed, pull (open) TRIM/AP Circuit Breaker, then reset (close) the circuit breaker.

ELECTRIC PITCH TRIM SYSTEM REMAINS INOPERATIVE

3. Reduce pitch control forces by changing speed or flap configuration (within airspeed limitations).
4. CRUISE - Consider range reduction and destination change if cruise speed is reduced by flap speed limitations.
5. APPROACH - Establish stabilized approach using normal speeds is preferred. This may include change of destination for longer runway.
6. LANDING WITH FAILED TRIM - Consider making Flaps UP landing if pitch control force increases uncomfortably when lowering landing flaps.
7. Land as soon as practical.

ELECTRIC PITCH TRIM SYSTEM RESUMES NORMAL OPERATION 3.

3. Land as soon as practical.

5.19 EMERGENCY PROCEDURE: Emergency Descent

Indications/Recognition

- This procedure may be directed by another checklist or initiated by the pilot to rapidly lose altitude in an emergency situation.

Teaching Considerations

- Aircraft limitations.
- Appropriate recovery altitude for simulated emergency descents.

Execution

1. **Throttle – IDLE**
2. **Mixture – RICH**
3. **Bank – 30° to 45°** (A steep bank greatly decreases the vertical component of lift, allowing the pilot to quickly establish a steep descent angle while maintaining positive load factors (G-forces) on the airplane.)
4. Rollout – Upon Obtaining VNO

NOTE: In the event of an engine fire the mixture should be idle/cut-off and the fuel pump turned off.

5.20 EMERGENCY PROCEDURE: Spin Recovery

Indications/Recognition

- Stalled condition.
- One wing often drops, then the nose yaws in the direction of the low wing.
- Rolling about longitudinal axis.

Teaching Considerations

- Different phases of a spin.
- CG location.
- Overstressing the aircraft.
- Spin aerodynamics.
- Flight situations where unintentional spins may occur.

Execution

1. **POWER IDLE** - RETARD THROTTLE TO IDLE POSITION.
2. **AILERONS NEUTRAL** - AIPLACE AILERONS IN NEUTRAL POSITION.
3. **RUDDER OPPOSITE** - APPLY AND HOLD FULL RUDDER OPPOSITE TO THE DIRECTION OF ROTATION.
4. **ELEVATOR FORWARD** - JUST AFTER THE RUDDER REACHES THE STOP, MOVE THE CONTROL WHEEL BRISKLY FORWARD FAR ENOUGH TO BREAK THE STALL.
 - a. Full down elevator may be required at aft center of gravity loadings to assure optimum recoveries.
5. HOLD THESE CONTROL INPUTS UNTIL ROTATION STOPS.
 - a. Premature relaxation of the control inputs may extend the recovery.
5. AS ROTATION STOPS, NEUTRALIZE RUDDER, AND MAKE A SMOOTH RECOVERY FROM THE RESULTING DIVE.

NOTE:

- If the rate of the spin makes determining the direction of rotation difficult, the magenta turn rate indicator at the top of the HSI compass card will show the rate and direction of the turn. The HSI compass card will rotate in the opposite

NOTE: If the rate of the spin makes determining the direction of rotation difficult, the magenta turn rate indicator at the top of the HSI compass card will show the rate and direction of the turn. The HSI compass card will rotate in the opposite direction. Hold opposite rudder to the turn vector direction.

5.21 ABNORMAL PROCEDURE: Low Oil Pressure

Indications/Recognition

- Low reading of oil pressure.
- Oil pressure annunciator may be illuminated.
- High oil temperature reading.

Teaching Considerations

- Reasons for partial or complete loss of oil pressure.
- Troubleshooting actual failure versus faulty gauge.
- Selecting the closest suitable airport or landing site.

Execution

1. Annunciator – CHECK
2. Oil Pressure – CHECK
3. Oil Temperature – CHECK
4. Prepare for a power-off landing – The engine may stop suddenly without engine oil. Maintain altitude until such time as a dead stick landing can be accomplished. Don't change power settings unnecessarily, as this may hasten complete power loss. Depending on the circumstances, it may be advisable to make an off airport landing while power is still available.

5.22 ABNORMAL PROCEDURE: High Oil Temperature

Indications/Recognition

- High temperature reading of the oil temperature.
- Low reading on the oil pressure.

Teaching Considerations

- Cooling techniques.
- Troubleshooting actual failure versus faulty gauge.
- Selecting the closest suitable airport or landing site.
- Reasons for partial or complete loss of oil pressure.

Execution

1. Mixture – RICH
2. Throttle – REDUCE
3. Oil Pressure Gauge – CHECK
4. Oil Temperature – CHECK
5. Prepare for a power-off landing - High engine oil temperature due to the loss of oil may cause the engine to stop suddenly. Maintain altitude until such time as a power-off landing is possible, should it be necessary. Don't change power settings unnecessarily, as this may hasten complete power loss. Depending on the circumstances, it may be advisable to make an off airport landing while power is still available.

5.23 ABNORMAL PROCEDURE: Engine Roughness

Indications/Recognition

- A loss in engine RPM.

Teaching Considerations

- Selecting the closest suitable airport or landing site.
- The effect of atmospheric conditions on engine performance.

Execution

1. Mixture – Adjust for Maximum Smoothness
2. Carburetor Heat – ON
3. FUEL SHUTOFF Valve – ON
4. Engine Gauges – CHECK
5. MAGNETOS Switch – L then R then Both (If operation is satisfactory on either magneto, proceed on that magneto at reduced power with mixture full rich to the nearest airport.)
6. If roughness persists – Prepare to complete Engine Failure – Inflight checklist

5.24 EMERGENCY PROCEDURE: Door Open in Flight

Indications/Recognition

- Door suddenly opens unintentionally in flight

Teaching Considerations

- Importance of properly latching door preflight and what to do if opened

Execution

1. CABIN DOOR - LEAVE OPEN (do not attempt to close)
2. THROTTLE Control - REDUCE (as necessary)
3. Airspeed - 80 KIAS (or less)
4. Seat Belts - CHECK (verify secure and tight)
5. Cabin - CHECK (stow loose materials) 6. Land as soon as practical.

5.25 ABNORMAL PROCEDURE: Loss of Communications

Indications/Recognition

- Failure to communicate through the radio with outside sources.

Teaching Considerations

- Lost communications during VFR/IFR conditions.
- Alternate courses of action.
- Attempting to use different frequencies.
- Faulty push-to-talk switch: Trying the button on the other control wheel.
- Setting audio panel to speaker.
- Use of the hand-held mic.

Execution

1. Radios – Switch
2. Circuit Breakers – Check (If a breaker has popped, do not reset)
3. Volume – Check
4. Transponder – Squawk 7600
5. Proceed as required for VFR conditions.
6. Additional troubleshooting:
 - a. Attempt to use different frequencies.
 - b. Faulty push-to-talk switch; try the button on the other control wheel.
 - c. Set audio panel to speaker.
 - d. Use the hand-held mic.
 - e. Use your cell phone, if available.

5.26 Emergency Equipment and Survival Gear

Objective

To develop the pilot's knowledge of the elements related to emergency equipment and survival gear appropriate to the aircraft and environment encountered during the flight.

Description

This section outlines the available emergency equipment and survival gear located in the Cessna 152/162/172.

Teaching Considerations

- Additional personal gear. (i.e., cell phone, credit card)
- Required winter clothing.
- Survival Kit
- Emergency Locator Transmitter (ELT)

6 GLOSSARY OF ABBREVIATIONS AND TERMS

Abeam: An aircraft is “abeam” a fix, point, or object when that fix, point, or object is approximately 90 degrees to the right or left of the aircraft track. Abeam indicates a general position rather than a precise point.

A/FD - Airport/Facilities Directory: An FAA Publication containing information on all airports, communications, and NAVAIDs.

AGL - Above Ground Level: Actual height above the ground.

Aiming Point: During the landing procedure it is the point on the ground at which, if the airplane maintains a constant glidepath and was not flared for landing, it would strike the ground.

Angle of Attack: The acute angle between the chord line of the airfoil and the direction of the relative wind.

CRM - Crew Resource Management: The effective use of all available resources: human resources, hardware, and information. Human resources include all groups routinely working with the cockpit crew or pilot who are involved with decisions that are required to operate a flight safely. These groups include, but are not limited to:

- dispatchers
- cabin crewmembers
- maintenance personnel
- air traffic controllers (ATC)
- weather services

CRM is not a single *task*, but a set of competencies that must be evident in all tasks. The principles of CRM should be applied to all operations regardless of whether tasks are done as a single pilot or as part of a crew.

Dead Reckoning: Navigation solely by means of computations based on the time, airspeed, distance, and direction.

Discrepancy: The term for an inoperative or defective piece of equipment.

DME - Distance Measuring Equipment

ELT - Emergency Locator Transmitter: A small, self-contained radio transmitter that automatically, upon the impact of a crash, transmits an emergency signal on 121.5, 243.0, or 406.0 MHz.

EPU - External Power Unit: An external battery used to crank the engine without having to gain access to the aircraft’s battery.

FAF - Final Approach Fix: The fix from which an IFR final approach to an airport is executed, and which identifies the beginning of the final approach segment. An FAF is designated on government charts by the Maltese cross symbol for non-precision approaches, and the lightning bolt symbol for precision approaches.

Flight Controls:

- Ailerons
- Elevator/Stabilator
- Rudders
- Trim
- Flaps

Fuel Pump: An engine driven or electrically powered pump used to supply positive fuel pressure. The electric fuel pump should be turned on before switching tanks, and should be left on for a short period thereafter.

Go-Around Point: The point at which if the aircraft has not touched down under control, a go-around should be executed. **NOTE:** A go-around can be executed at any point during the landing phase as deemed necessary by the PIC.

GPS - Global Positioning System: A satellite-based radio positioning, navigation, and time-transfer system.

IAF - Initial Approach Fix: The fix depicted on Instrument Approach Procedure charts where the Instrument Approach Procedure begins unless otherwise authorized by Air Traffic Control.

Instruments:

- Flight Instruments:
 - Airspeed Indicator
 - Attitude Indicator (gyro)
 - Altimeter
 - VSI - Vertical Speed Indicator
 - Heading Indicator (directional gyro)
 - Turn Coordinator and Inclinometer (ball)
 - Magnetic Compass
- Radio Navigation Instruments :
 - VOR/LOC - VHF Omni-Directional Range/Localizer
 - ADF - Automatic Direction Finder
 - NDB - Non-Directional Radio Beacon
 - GPS - Global Positioning System
- Engine Instruments:
 - Tachometer
 - Fuel Quantity
 - Engine Gauge, Oil Temp, Oil and Fuel Pressure

IFR - Instrument Flight Rules: Rules and regulations established by the Federal Aviation Administration to govern flight under conditions in which flight by outside visual reference is not safe. IFR flight depends on reference to instruments in the cockpit, and navigation by reference to electronic signals.

KIAS - Knots Indicated Airspeed

Land as soon as possible: Land at the nearest available landing site. If no airport is within gliding distance, an off-airport landing should be made.

Land as Soon as Practical: Divert to the nearest suitable airport.

MAP - Missed Approach Point: A point prescribed in each instrument approach at which a missed approach procedure shall be executed if the required visual reference has not been established.

MCA - Minimum Controllable Airspeed: An airspeed at which any further increase in angle of attack, increase in load factor, or reduction of power, would result in an immediate stall.

MDA - Minimum Descent Altitude: The lowest altitude (in feet MSL) to which descent is authorized on final approach, or during circle-to-land maneuvering in execution of a non-precision approach.

MEL - Minimum Equipment List: An inventory of instruments and equipment that may legally be inoperative, with specific conditions under which an aircraft may be flown with such items inoperative.

MFD - Multifunction Display

MSL - Mean Sea Level

MRA - Minimum Recovery Altitude: The lowest altitude expressed in feet (MSL or AGL) to which descent is authorized.

OAT - Outside Air Temperature

PFD - Primary Flight Display

PIC - Pilot in Command: The pilot who has final authority and responsibility for the operation and safety of the flight. They have authority over all decisions, are authorized to take control when they feel it is necessary for safety or instruction, and are responsible for determining safe flight.

Pilotage: Navigation by reference to landmarks or checkpoints.

POH - Pilot's Operating Handbook

PIM - Pilot Information Manual

PTS - Practical Test Standards

Pylons: An identifiable point on the ground marking a prescribed turning point used in some ground reference maneuvers.

Rotation: The act of applying control wheel back pressure to raise the nose-wheel off the ground.

Sink Rate: The rate at which the aircraft is descending.

Slips: An intentional maneuver to decrease airspeed or increase the rate of descent, and to compensate for a crosswind on landing.

Forward Slip: This slip moves sideways, the nose points into the wind, and is used to quickly decrease altitude without increasing airspeed.

Side Slip: This slip moves forward, the nose is aligned with the ground track, and is used to apply a crosswind correction during landing.

Slow Flight: Flight at any airspeed that is less than cruise. The PTS requires demonstration at MCA to feel the effects of airspeeds and configurations found in takeoffs, climbs, descents, etc., at which any increase in angle of attack, load factor, or a reduction in power would result in an immediate stall.

SRM - Single Pilot Resource Management: Single-Pilot Resource Management refers to the effective use of ALL available resources: human resources, hardware, and information. It is similar to Crew Resource Management (CRM) procedures that are being emphasized in multi-crewmember operations except that only one crewmember (the pilot) is involved.

TPA - Traffic Pattern Altitude: The altitude to be flown on the downwind leg of an airport traffic pattern. The AIM recommends adding 1,000 feet AGL to the field elevation, but generally ranges from 600-1,500 feet AGL.

Touchdown Point: The desired point on the runway where the aircraft should touch the ground. This should be a minimum of 200 feet past the threshold and within the first 1/3 of the runway.

VFR - Visual Flight Rules: Flight rules adopted by the FAA governing aircraft using visual references, VFR operations specify the amount of ceiling and the visibility the pilot must have in order to operate according to the rules. When the weather conditions are such that the pilot cannot operate according to VFR, he or she must use instrument flight rules (IFR).

V-Speeds

- VSO - Stalling Speed in landing configuration.
- VS - Stalling Speed at a specified configuration.
- VX - Best Angle-of-Climb Speed. The airspeed that delivers the greatest gain of altitude in the shortest distance.
- VGLIDE - Best Glide Speed.
- VY - Best Rate-of-Climb Speed. The airspeed that delivers the greatest gain in altitude in the shortest possible time.
- VA - Maneuvering Speed. The maximum speed at which full available aerodynamic control will not overstress the airplane.
- VFE - Maximum Flap Extended Speed.
- VNO - Maximum structural cruising speed.
- VNE - Never Exceed Speed.

Wake Turbulence: Wingtip vortices that are created when an airplane generates lift. When an airplane generates lift, air spills over the wingtips from the high pressure areas below the wings to the low pressure areas above them. This flow causes rapidly rotating whirlpools of air called wingtip vortices or wake turbulence.

Wind Shear: A sudden drastic shift in wind speed, direction, or both that may occur in the horizontal or vertical plane.

